USER MANUAL 使用說明書

HITACHI Inspire the Next

HITACHI FULLY AUTOMATIC WASHING MACHINE 日立全自動洗衣機

Model NW-80ESP NW-70ESP NW-80ES NW-70ES



承蒙您選購日立的全自動洗衣機,謹此致衷心謝意。

- 請細閱本說明書,以便正確使用本洗衣機。
- 閱讀完畢,請妥善保存本說明書,以備將來查閱。

CONTENTS

目錄

Features 前言3Safety Precautions 安全方面的注意事項4Installation Guide 安裝指南8Installation 安裝14
Before Using Your Machine 開始洗衣前
Checking Amount of Laundry and Detergent (Approximate Amount) 檢測洗衣量和洗衣粉量(大致用量)
Selection of Laundry Program 洗衣程序的選擇方法24Content of Laundry Program 洗衣程序的內容26Program Description 各程序的說明27Using the Preset for Washing 預校時間洗衣30
Using the Detergent Again 再次使用洗衣劑 31 Using the Washing Cap 使用洗衣蓋 32 Air Jet Program 風乾程序 34 Washing in Your Favorite Way 按照您喜歡的方式進行洗衣 36 Clean Process 清潔程序 38 Maintenance and Repair 維護保養方法 39 Troubleshooting 有故障發生時 42 Optional Parts 另售部件 48 Product Specifications 產品規格 48



The number next to the sign is the page number for detailed description. 後面的數字表示具體說明的頁數。

Air Jet drying 輔助性乾衣功能

It's an economic mode of drying without heating.

無需進行加熱的節能乾衣方式

- May be used to dry the heat-irresistible swimsuit or the underwear containing the amino heat-insulation materials. 可乾燥不耐熱的泳衣或含氨基隔熱材料的內衣。
- Keep room free of mugginess for causing no temperature rise. 由於溫度不上升,房間不會悶熱。
- · Control the black mildew. 抑制洗衣槽的黑色霉菌



%The drying capacity can be as high as 2kg. 乾衣容量可達 2kg

*The duration is irrelevant to the dryness level for applying the timer mode of drying. 採用定時乾燥方式,結束時間與乾燥程度無關

Please read "USER MANUAL" carefully for proper operation.(2 34) 請仔細閱讀"使用說明書",以便您能正確使用。(734)

Deep Penetration Wash 渗透清洗

Infiltrate the detergent inside the cloth to detach the dirt off the cloth fiber.

使洗衣粉滲入到衣料內部,使污垢從布料纖維上脫落。

The detergent dissolves sufficiently to become the high-concentration detergent that washes the laundry in infiltration mode for easier detachment of dirt off the cloth fiber.

洗衣粉充分溶解,形成高濃度洗衣液,對衣物進行滲透清洗,使污垢更易從布料纖維上分離。

1 Put detergent in, adding some water 2 Make the detergent 加入洗衣粉,供給少量水 The detergent put in at the injection opening will fall below the pulsator.

從注入口加入的洗衣粉將落在攪 拌翼下方,並注入少量水

dissolves fast by rotating the spinning basket.

通過脫水桶旋轉加速洗 衣劑溶解。

3 The detergent dissolves inside the cloth

溶解洗衣粉使其滲入衣物 The concentrated detergent dissolves with the power agitating of pulsator, and infiltrates sufficiently inside the cloth.

濃縮洗衣粉在攪拌翼強力攪拌下溶 解,充分渗透到衣物內部

4 Three-step washing 三步洗衣

Inject a little water, and the dirt will detach with the highly concentrated detergent; inject more water to the normal water level for washing. 加入少量水,污垢在高濃度洗衣液下 脱落,再加水到通常水位處進行洗衣



※ Please use concentrated powder detergent to wash. 請使用濃縮合成粉末洗衣粉進行洗衣。

The infiltration washing can't be performed to the processes of "DELICATE", "BLANKET" and "CLEAN". (Because of no detergent dissolution course in these processes)

『毛絨』、『被毯』、『清潔』程序不能進行滲透清洗。(因爲沒有溶解洗衣劑的過程)

Loosen the post-spinning laundry for easy taking out. 疏鬆脫水後的衣物,使之易於取出。



- * The laundry rearrangement may be out of service in the case that the washing capacity is less than 1kg or more than 5kg
 - 洗衣量不足 1kg 或超過 5kg 時,有可能無法進行免纏結程序。
- ※ The laundry rearrangement doesn't perform in the case of manual setup of "RINSE", "SPIN" or "SPIN ONLY". 手動設定"沖洗"、"脫水"或"只脫水"等時,不進行免纏結程序。

To purchase NW-70ESP, NW-80ES, NW-70ES users 致購買 NW-70ESP , NW-80ES , NW-70ES 的用戶

The highest water level of NW-70ESP and NW-70ES is 59L, NW-80ES and NW-70ES are not on drain water. Except this, the use of other methods is basically the same. So NW-70ESP, NW-80ES, NW-70ES use the NW-80ESP illustrations to explain the statement.

NW-70ESP , NW-70ES 最高水位為「59L」, NW-80ES , NW-70ES 不是上排水機型,除此外其它的使用方法基本相同。所以 NW-70ESP , NW-80ES , NW-70ES 機型使用 NW-80ESP 說明書的解說插圖



Safety Precautions 安全方面的注意事項

Please read this part of substance carefully for proper operation before using your machine.

- 使用之前,請仔細閱讀這部份的內容,以便正確使用。 · This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or
- lack of experience and knowledge, unless they have been given supervision or instruction on how to use the appliance safely. 缺乏經驗或知識者、兒童、殘疾人士、智障人士在沒有監管和指導的情況下請勿使用本品
- ★ The precautions stated here are classified as "Warning" and "Attention" according to the damage and the emergency caused by misoperation, and are described respectively in line with the marks below. 這裏所說的注意事項根據錯誤操作而引起的傷害大小以及緊迫程度,分為"警告"和"注意"兩種,並且按照以下標識 進行區分說明。

Warning 警告

With no respect to this mark, the misoperation may cause death or GBH.

表示如果無視此標記,誤操作後,可能引起死亡或重傷事故。

Attention 注意

With no respect to this mark, the misoperation may cause body harm or object damage. 表示如果無視此標記,錯誤操作後,可能引起人身傷害或物體捐壞事故。

Graphic mark 圖形例子



This mark indicates the content of warning or attention.

表示敦促警告及需要注意的內容。



This mark indicates the prohibited action.

表示禁止行為。



This mark indicates the compulsory action to be carried out.

表示必須執行的強制行為。

Warning 警告

Power

雷源

Humid places

prohibited

禁止潮濕地方



Dismantle, repair or alterations should only carried out by professional technicians.

Prohibited 禁止拆卸

除指定的專業維修人員外,應絕對禁止他 人拆卸、修理或改裝洗衣機。

Avoid electric shock, fire, and body injury due to improper

避免因不恰當行爲而導致觸電、火災及人身傷害。



接地連接

This washing machine is equipped with the electricity wire with bielectrode grounding plug, please use the bi-electrode arounding socket. The creepage protector shall be used if possible.

本品採用二極接地插頭電源線,請使用二 極接地電源插座。可能的話,最好使用漏 電保護器

To prevent electricity leak which may cause injuries. 避免因漏電故障引起傷害。



Electricity supply must be unplugged with dry hands.

嚴禁使用濕手插拔電源插頭。

Wet hands Prohibited 禁止濕手觸摸

Otherwise, this may cause electric shock 否則可能導致觸電事故。



• Otherwise, electricity leak causing electric shock or fire may occur. 避免因漏電而引發觸電或火災事故。

Please use the single socket with

請單獨使用額定値爲交流 220V 、13A

Washing machine should not be

exposed to wind and rain.

installed in humid place or in places

請勿將洗衣機安裝在潮濕或容易受到風吹

220V, 13A specification.

以上容量的電源插座。

The share of the same socket with other electric appliances may cause

雨淋的地方。

fire due to excessive heat. 若與其他電器設備共用同一插座,可

能因異常發熱而導致火災事故。

Do not put water in direct contact with the unit during maintenance and repair. 進行保養時,請勿直接將水淋灑在洗衣機的 各個部位。

禁止

This may cause short circuit or electric

否則可能造成短路或觸電事故。



220V

13A!

Warning 警告



Do not put your hand into the basket until it has stopped completely.

在脫水槽完全停止轉動前,嚴禁將手伸進 槽內拿取衣物。

· Even when the spinning of the basket is slow, there is still a danger of being ? caught in the motion, resulting injuries., Particular attention should be paid when children are around.

危險。兒童在旁時尤需注意。

 


Prohibited 禁止

Do not put your hands into the washing . spinning basket during the washing and rinsing process.

洗衣和沖洗過程中,嚴禁將手伸入洗衣 . 脫水槽內。

Even when the spinning is slow, hands may be trapped by clothes. If necessarily, please press pause button, and put your hands into the basket after it has stopped completely. 即使旋轉緩慢,手部仍有被衣物纏繞的危險。若必須將手伸 入槽內時,請按下暫停按鈕,待洗衣 · 脫水槽完全停止旋轉 後再伸入槽內。



Prohibited

should not be used.

嚴禁使用已損壞的電源線、插頭或鬆動 的插座。





- Otherwise electric shock, short circuit or fire may take place.
- · If the power supply cord is damaged, Please repair it in a repair shop appointed by the manufacturer or its service agents in order to avoid a hazard.

否則可能導致觸電、短路或起火。

電源線破損時,請到廠商指定的店鋪修理,以免危險。

 


Keep child away from the washing . spinning basket and do not place box or shelves next to the washing machine. 嚴禁讓兒童探看洗衣 · 脫水槽。也請勿在 洗衣機旁放置台架等物品。

· Children should be supervised to ensure that they do not play with the appliance.

請督導兒童,確保其不玩耍機器。 Children may fall into the basket

兒童可能因掉入洗衣 ・ 脱水槽中造





No smoke or fire 禁止煙火

This washing machine is strictly prohibited to get close to the locations with candle, mosquitorepellent incense, dog-end or other kinds of open flame.

本洗衣機嚴禁靠近蠟燭、

蚊香或煙頭等有明火的場 所。



· To avoid injuries caused by the lock damage. 避免因結構損壞而引致傷害



Do not damage wire. 嚴禁損壞電源線。

Prohibited

Do not damage or alter the wire, forcibly bend, pull, twist or handle the wire. Beside, please do not put weight on or trap the wire. 請勿隨意進行改裝、強行彎曲、拉 伸、扭曲及捆扎電源線。此外,亦請 勿將重物壓在其上或夾於其中。



Damage of wire may cause electric shock or fire. 若電源線遭受損傷,可能導致觸電或火災



Thoroughly wipe the power plug when dirt is adhering the prong or around the base of the prong.

電源插頭的插片以及插片的夾緊面上,若 有塵垢附著時,請擦拭乾淨後再使用。



Failure to do so may cause a fire. 可能會引起火災。



Do not put gasoline, benzine, alcohol, thinner of fabrics with these stains into or near to the washing machine.

請勿將汽油、煤油、酒精、稀釋劑或 沾有上述液體的衣物放入槽內或靠近 洗衣機。





• To prevent fire or explosion which may cause injuries. 否則可能引發爆炸或火災事故。



Safety Precautions (continued)

安全方面的注意事項(續)

Warning 警告



禁止

Do not insert a screwdriver into the Lid Lock hold.

嚴禁用螺絲刀插入洗衣機機蓋緊鎖裝置部位的孔

· To avoid injuries caused by the lock damage 避免因裝置損壞而引致傷害



Do not open the lid in locked status by force. 嚴禁強行打開處於鎖定狀態的機蓋

Prohibited 禁止

Otherwise, the lid or locking device may be damaged, resulting in unstoppable spinning of washing • spinning basket and thus causing injuries.

否則將會損壞機蓋或鎖緊裝置,導致 洗衣 · 脫水槽無法停止旋轉,造成人





 
Do not wash large folded washings such as a blanket.

請勿將毛毯等大型洗滌物折疊後洗滌。

Folded washings will destroy the balance during the spinning to cause abnormal

The abnormal vibration during the spinning will eject the washings, resulting in the damage of the washing machine, the wall, the floor and the clothes.

折疊起來的洗滌物,在脫水過程中會破壞平衡,從而發生異常振動的現象。 脱水時的異常振動會造成洗滌物彈出,導致洗衣機、牆壁、地板及衣物的損壞。



Waterproof mattress and other clothes 防水性的墊子及其他衣物



Do not use a mesh of 40cm or more on one side of the washing machine.

請勿在洗衣機單側使用 40cm 以上的網狀物。

This will bring abnormal operation, which may cause the washings to be concentrated on one side of the washing . spinning basket and the machine to fail to operate 會引發異常操作,導致洗滌物都集中在洗衣 • 脫水槽一側, 不能運轉等情況。



Do not wash, rinse and spin thick and hard objects such as waterproof mattress, cloth, clothes, stepping pad and entrance mats as well as waterresistant fiber products and carpet.

請勿對防水性墊子、布類、衣物、踏腳墊、 玄關墊等厚硬物及防水性纖維產品、地毯進 行洗衣、沖洗、脫水。

■ In case of abnormal vibration, although the safety device is started, the washing machine can't stop operating immediately due to the running washing • spinning basket. 發生異常振動的現象時,雖然會啟動安全裝置,但由於洗衣。脫水槽還在運轉,所以洗衣機不能馬上停止運轉。

Attention 注意



Do not pull the wire from the socket when unplugging the unit. 拔掉電源插頭時,切勿拉扯電源線,

Prohibited 必須拿住插頭本體向外拉。

To avoid electric shock or fire cause by short ciruit may result. 避免觸電或因短路導致火災事故。



Do not stand on or put weight on the top of the unit.

請勿站立在洗衣機上,或 Prohibited 者在其上放置重物。

Otherwise, deformation and damage may result causing injuries. 可能因變形或損壞而造成人身傷害。



Do not connect to the hot water supply.

And, water of above 60°C should not be used for washing.

請勿連接至熱水管,並不應使用超過 60°C 水溫進行洗滌。

Electric shock or leakage may occur due to deformation of plastic parts 可能因塑料部件的變形受損而導致

觸電或漏電事故。



Keep hands and feet away from the bottom of the washing when it is operating. 運轉過程中,請勿將手或腳伸至洗衣機的 Prohibited 下部。

Parts in motion beneath the unit may cause injuries. 旋轉部件可能會引起人身 傷害。



⚠ Attention 注意



Please unplug the unit when not using the unit for a long period of time. 不使用洗衣機時,必須將電源插頭拔出。

Electric shock or leakage due to aging of insulator may cause fire.

可能因絕緣老化而引發觸電、漏電或火災事故。



Check water supply hose connection by turning on the water tap before washing.

開始洗衣前,請先打開水龍頭,檢查供水 leakage 管的連接狀況。 漏水

Improper connection of water supply hose might cause water leak or unexpected damage.

供水管如未能妥善連接水龍頭,會導致漏水或不可預計的損壞。



When installing the washing machine, be sure to hang the water drainage hose.

安裝洗衣機時,請務必將排水管掛起。 leakage 漏水

If water drainage hose is not hung up, the remained water inside will flow out and result in unnecessary loss. 如果排水管沒有掛起,殘留在內部的水會流出,從而造成 不必要的損失。



Water supply hose should be tightly screwed to the unit.

供水管連接機體的螺母必須擰緊。

water leakage 漏水



可能導致漏水。 Used for a long period of time, the

unit may result in water leakage caused by loosen union nut. So please check it in time and screw tightly again. 長期使用後,可能會因連接螺母鬆動造成漏水而遭受不必要的 損失。因而請務必定期檢查並重新擰緊已鬆動的螺母。



Electricity supply must be unplugged with dry hands during maintenance and repair. 維修保養時,請務必將電源插頭從插座拔 HI .

Otherwise, electric leakage causing injuries may occur. 避免因漏電而招致傷害。





leakage

Please turn off the water tap when not using the unit.

不使用洗衣機時,必須關閉水龍頭



漏水

To prevent damages caused by water leakage 以防產生漏水。



Do not wash, rinse and spin the water proof fabric or cloth.

Prohibited 禁止

請勿洗滌防水性的布料或衣物。 sleeping bag, raincoat, cover of skiing, utilities,

bicycles, cars and motors 睡袋、雨衣、滑雪用具以及自行車、轎車、摩托車 的車置等。

· Otherwise may lead to injury by abnormal vibration during spinning or damage the washing machine, wall, floor and clothes. 可能在脫水時產生異常振動而引起人身傷害,或者導致洗衣機、 牆壁、地板以及衣物的損壞。



Do not incline installing the washing cap. Do not use the washing cap except "Wool" program, "Blanket" program.

嚴禁傾斜安裝洗衣蓋,並絕對禁止在『毛絨』、『被毯』程序以外使用洗衣蓋。

· Splash of water may occur or washing cap may be swung out of the basket. 可能會因水滴飛濺或洗衣蓋彈飛出造成洗衣機受損或人身傷害事故。

In case when the washing machine is used in places other than ordinary households. 在一般家庭以外使用時

· If the washing machine is in use for extremely long periods of time compared to ordinary household usage, such as in dormitories and hospitals, it may be necessary to change parts (such as the clutch, belt or sealed pad) more frequently. In this case, consult with the dealer from whom you purchased the washing machine and have the machine inspected periodically.

如在宿舍或醫院等地方使用,而每天的使用時間比一般家庭較長時,或需在短期內更換零件(如離合器、皮帶、密封墊等)。請與購買 洗衣機的商店聯絡,接受定期檢查後再使用。

This appliance is intended to be used in household and similar applications such as:(IEC 60335-2-7) staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments; areas for communal use in blocks of flats or in launderettes.

本設備僅供家居使用,亦可用於下列類似用途:(IEC 60335-2-7)店鋪、辦公室及其他工作環境之員工廚房;農舍; 供酒店、汽車旅館及其他住宿類環境之客戶使用;提供床鋪及早餐類型環境;公寓樓房共享區域使用或自助洗 衣店中。



Installation of Washing Machine 洗衣機的安裝

Where to install 安裝地方

Please install on a solid horizontal surface.

請安放在堅硬、平坦的地面上。

Installation on a slippy or irregular surface may result in noise and shaking.
 安放在易於滑動、凹凸不平的地面上,會容易產生振動和噪音。



Solid, horizontal surface 堅硬、平坦的地面



Weak surface 柔軟的地面



Irregular surface 凹凸的地面

The washing machine should have ventilation openings in the base.
 The washing machine bottom must not be obstructed by carpeting when the washing machine is installed on a carpet floor

 
洗衣機的底部應保持通風。


安置洗衣機時,請勿因地毯而妨礙洗衣機的底面安置。

Avoid installing the unit too close to the wall.

請勿緊貼牆壁安放。

This is to prevent abnormal vibration and noise.
 以防止異常振動和噪音。



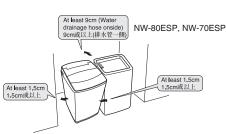

How to install 安裝方法

The unit should be installed on a flat horizontal surface.

請水平安裝洗衣機。

Otherwise sudden stop or abnormal sound may result during the spinning cycle.

否則,會導致脫水時停機或產生異常聲音。

Installation of Washing Machine 洗衣機的安裝

 
Adjust the instability of the washing machine with adjustable leg. 用可調機腳來調整洗衣機的不平穩。



Please make sure of the horizontality of the washing machine.

請確認機體的水平度。

· As shown in the figure, the horizontality can be easily observed by the string used to hang an object. 如圖所示,用懸掛重物的細繩來觀察,即可輕易確認 其水平度。




Inspection of trial run 試運轉的檢查

Put some water into the washing barrel and reconfirm its horizontality.

在洗衣槽內放些水,請再一次確認其水平度。

 · The ground is level if all front, rear, left and right height difference between the spinning hole and water surface are less than 3mm. 脱水孔相對於水面的高度差 (B 與 C 的差),如果前後左右均在 3mm 以內, 就表示地面是水平的。




- Confirming the machine type of NW-80ESP/NW-70ESP, please install the water drainage hose and hang it on. Otherwise there will be no water in washing basket. 10 NW-80ESP/NW-70ESP 機型確認時,請先安裝排水管並將其連起,否則洗衣槽內無法盛水。 排水管的安裝及固定方法。 10


How to Use the Adjustable Leg 可調機腳的使用

Loosen the lock nut by unscrewing in arrow direction 1 before using the adjustable leg to stabilize unit. 將鎖緊螺母沿箭咀方向 ① 旋鬆,再旋轉可 調機腳調整機身的平穩。



 After adjusting of the unit, tighten the lock nut by screwing it in arrow direction. 調整完畢後,將鎖緊螺母沿箭咀方向 ②



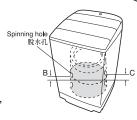



Installation Guide (continued)

安裝指南 (續)

How to Install the Water Drainage Hose 排水管的安裝方法 (NW-80ESP, NW-70ESP)

Connect the water drainage hose with the water drainage joint on the back of the body. 將排水管連接到機體背後的排水接頭上。

• Fully insert it into place to avoid leakage. 應切實地插入到位,以免漏水。

 


3 ①Insert the fixing holder of water drainage hose into mounting hole.
將排水管固定架插入孔中。

②As shown in illustration, rotate the fixed leg for 90 degree into hole. 按圖示方向旋轉 90 度,將固定腳旋入孔中。

Pull the water drainage hose straight, concave to fix into the fixing holder of water drainage hose.

將排水管拉直,嵌入固定 在排水管固定架上。



Attention 注意

 To avoid direct draining due to the fallen water drainage hose, the water drainage hose must be used only after installing into fixing holder, and its hanging height should not exceed 1m.

爲了避免排水管掉落造成直接排水,請務必將排水管嵌入固定架後再進行使 用,且排水管的掛靠高度不應超過1米。

- Do not release the water drainage hose lest the water is splashed. 請勿將排水管放倒,以免水洒落。
- Do not use extended water drainage hose. 請勿使用延長排水管。
- Do not immerse the U-shaped hose on the tail of the water drainage hose in the water.

請勿將排水管尾部的 U 型管浸沒在水中。

- When using it in winter, to prevent icing, please release the water drainage hose after using and place its tail in water container such as basin, set the washer to single dehydration mode and drain the remained water. 企 40 在冬季使用時,烏防止結冰,使用結束後,請將排水管放倒,並將其尾部放 入水盆等盛水容器,設定洗衣機爲單脫水,將殘留的水排乾。
- Be sure not to install the water drainage hose at a position lower than water drainage joint, otherwise, it could lead to difficulties in water drainage. 排水管安裝時,請勿低於排水接頭,如低於排水接頭可能會導致排水不暢。

 
After the connection is completed, please use hose clipper to clamp the water drainage hose to avoid fall-off.

連接完成後,請用軟管夾子將排水管夾住以防 止掉落。



Water drainage hose from the right or (left) side of the unit.

排水管從右側(或左側)引出。





Unplug U-shaped hose and insert into water drainage hose. 拔去 U 形管插入排 水管中。

※This discharge pipe installs the method to be only suitable in NW-80ESP, NW-70ESP. 此排水管安裝方法只適用於 NW-80ESP, NW-70ESP。



How to Install the Water Drainage Hose 排水管的安裝(NW-80ES, NW-70ES)

■ The water drainage hose is installed at the factory on the right side. It can be moved to the left side if necessary.


產品出廠時,排水管安裝在機身右側,請視排水位置的具體情況將其換至左側。

Lay the unit down slowly. 請將機體輕輕地放倒。


Lay the unit down on some corrugate paper to prévent damage. 放倒機體時,請在地面上放置一些瓦楞紙類的 襯墊,以免損傷機身。

Pull out the water drainage hose from the left side of the unit. 排水管從左面引出。

- 1) Remove the left water drainage hose cover. 將機體左面的排水管蓋拆下
- (2) Inserts in the scoop channel with screwdriver, loosens the hose clamp. 用一字螺絲刀插入凹槽內,鬆開軟管固定夾。 *Advert: please don't bump the screwdriver into the hose. ※注意:螺絲刀請勿碰到軟管。
- 3 After pulling out the end with marking " ≥ ±" (right) of the water drainage hose from the right groove of the unit, the end with marking "ヒダリ" (left) of the water drainage should be inserted into the corresponding groove of the left unit. 把排水管刻印文字 " ${\tt E}$ " $({\tt E})$ 標記部從機體右側的凹槽內引出,刻印文字 " ${\tt E}$ " $({\tt E})$ 標記部應嵌入機體左側對應的凹槽內。
- 4 The water drainage hose should be pulled out through the proper hosere tainer when the hose is pulled out on the left. 排水管從左面引出時,排水管應通過相應的軟管固定夾後再引出。

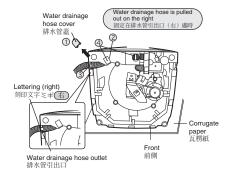

Water drainage hose is pulled out on the left 固定在排水管引出口(左)處時

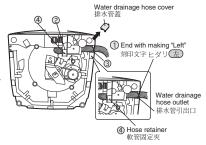

⚠ Attention 注意

The "ヒダリ" (left) or "ミギ" (right) mark of the water drainage hose should be inserted into the corresponding groove of the unit. 安裝洗衣機時,請務必將排水管的刻印文字 "ヒダリ (左)或 "ミギ"(右) 標記部嵌入機體相對應的凹槽內。

· Water drainage hose which inserts into the unit, can't touch other parts, to prevent the damage caused by water leakage

排水管在機體內的部分,不應與其他部件碰觸,以免因 破損產生漏水而導致不必要的損失。

- Water drainage hose retainer must be tightened. 排水管固定夾必須夾緊。
- The inner section of the water drainage hose must be secured by the retainer before fetched out. 排水管機內部分必須經固定夾固定後再引出。

When fitting the water drainage hose to the water drainage outlet

排水管插入排水口時

If the water drainage outlet is too shallow or the end of the water drainage hose touches the grounds, cut the end of the water drainage hose in an oblique angle. 排水口較淺或排水管前端與地面碰觸時,可 將排水管的前端沿斜向切除一部份。

rinsing or unit malfunction due to 排水管 poor drainage or too much subbles Water drainage during rinsing and spinning. 若不切除,在漂洗及脫水時,由於排 水狀況的不良,將會引起漂洗不充分 或因肥皀沫而影響電機運轉。

 Failure to do so may cause insufficient water drainage hose outlet 排水口

% This discharge pipe installs the method to be only suitable in NW-80ES, NW-70ES. 此排水管轉換方法只適用於 NW-80ES, NW-70ES。



Installation Guide (continued)

安裝指南 (續)

Installation of the base plate 底板的安裝


The base plate is placed on the packaging foam on the top of the washer.

出廠時,底板安放在洗衣機頂部的包裝發泡膠上

Lay the unit down slowly.


請將機體慢慢地放倒。

Lay the unit down on some corrugate paper to prevent damage.
 放倒機體時,請在地面上放置一些瓦楞紙類的襯墊,以免損傷機身。

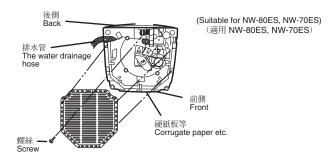

Align the hook on the base plate with the square hole on the chassis and insert it, then tighten the screw.

將底板上的扣位對準底盤上的方孔插入,然後收緊螺釘。

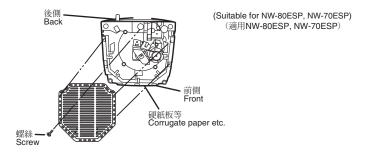



Installation Guide (continued)

安裝指南 (續)

How to Install the Water Supply Hose 供水管的安裝

Connecting the water supply hose to the main unit 供水管與機體的連接

Firmly tighten the union nut when connecting the water supply hose to the main unit.

沿箭咀方向旋轉連接螺母,使其與供水口緊緊相連。

- Loosely tightened union nut will cause water leakage.
 請務必擰緊供水管與機體的連接螺母。否則,將會漏水。
- When removing the hose, unscrew the union nut first. 拆卸供水管時,先鬆開連接螺母,再進行拆卸。



Extending the water supply hose 供水管的延長

Please use optional extension tube for lengthening the water supply hose. 請使用另行銷售的延長供水管。

One standard of extension hoses (3m) are available. Please inquire distributors for extending the water supply hose. 備有 3m 規格供購買。 如欲駁長供水管,請向銷售商查詢。

Appropriate water tap 適用的水龍頭

Horizontal thread taps as shown below.

水平式螺紋型水龍頭最爲適宜。

Horizontal thread tap 水平式螺紋型水龍頭 Square mouth tap 方口水龍頭 Universal household tap 萬能水龍頭













Please check before operation/請在使用前進行檢查

- Improper connection of water supply hose might cause water leak or unexpected damage. 供水管如未能妥善連接水龍頭,會導致漏水或不可預計的損壞。
 - In the course of time, there might be a risk of water leak due to aging of sealing material or rusting of metallic parts. 供水管經過長時間使用,密封材料老化和金屬零件生銹或會出現,而導致有漏水風險。

How to install and remove the water supply hose

供水管的安裝方法和拆卸方法

Water tap 水龍頭

■ Installing 安裝方法



 
Please connect the water supply hose to an appropriate water tap and tighten it by hand only. Do not use pliers or other tools, it might cause damage to the water supply hose.

請把供水管連接頭接駁至合適水 龍頭並用手旋緊。切勿使用鉗子或 其他工具,這會造成供水管損壞。

- Please use the water supply hose supplied with the washing machine.
 請使用隨機提供的供水管。
- Removing

拆卸方法

Turn off the water tap. 關閉水龍頭。



Press the start button and let the unit run for about ten seconds. 按下啟動按鈕,運轉 10 秒鐘。

- This is to prevent water splash when removing the tap. 爲了防止拆卸時水花四濺。
- **3** When removing the hose, unscrew the union nut first. 拆卸時,擰下連接螺母,即可拆除。

Main unit 機體

Turn the union nut in the direction firmly as shown by the arrow. Connect it to the water supply opening.

沿箭咀方向旋轉連接螺母,使其與供水口緊 緊相連。

⚠ Attention 注意



Firmly tighten the union nut when connecting the water supply hose to the main unit.

請務必旋緊供水管與機體的連接螺母。

• Failure to do so may result in water leakage.

螺母鬆脫的話,可能會漏水。



- Loosely tightened union nut will cause water leakage.
 連接螺母如不擰緊,可能產生漏水現象。
- When removing the hose, unscrew the union nut first. 拆卸時,擰下連接螺母,即可拆除。
- Please note that water supply hose should be used. 請使用隨機配套的供水管。
- The appliance is to be connected to the water mains using new hose-sets and that old hose-sets should not be reused.
 - 應使用附帶的新的連接水管進行連接,舊的連接水管 不得再次使用。



Before Using Your Machine

開始洗衣前

● Preparation for washing machine 洗衣機的準備

When the first using 第一次使用時

The washing machine can be used only after the proper installation in compliance with the "Installation Guide" .

按照『安裝指南』,確定將洗衣機安裝好後才可使用。


Daily using 日常的使用

- The U-shaped hose on the tail shall be tightly secured.
 (Applies to NW-80ESP, NW-70ESP)
 排水管尾端的 U 型管應牢靠地掛靠。(適用 NW-80ESP, NW-70ESP)
 The front of the water drainage hose must insert in the water drainage outlet.
 (Applies to NW-80ES, NW-70ES)
 排水管的前端應牢固地插入排水口內。(適用 NW-80ES, NW-70ES)
- 2 Connect the water supply hose and turn on the water tap. 接好供水管並緩慢打開水龍頭。
- ★ 接好供水管並緩慢打開水龍頭。
 Insert the power plug into the socket.
- **3** Insert the power plug into the socket 將電源插頭插入插座。

How to open the lid 機蓋的開啟方法

 When opening the lid, be careful to prevent it from bending and pull it up. It's maybe hard to open the lid. 打開機蓋時,應避免機蓋彎折並將其拉起。機蓋有可能較難 打開。



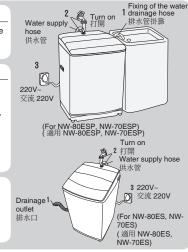

● Preparation for laundry 洗衣前的衣物準備

Secure strings and pull zips up before putting laundry into the washing machine. (beneficial suggestion) 洗滌帶有帶子或拉鏈的衣物時,請先繫好帶子或將拉鏈完全拉上。(溫馨提示)

 This is to prevent damage to clothes and zips.
 防止損傷衣物和拉鏈。

Clothes of easily-fadeaway colors must be separated. 易褪色的衣物應分開洗滌。

 The bluejeans that are inclined to fade may decolor during washing.
 洗滌易褪色的藍色牛仔褲可能

流滌易褪色旳監色午仔褲可f 會引起褪色現象。 The laundry from which the hair or silk is inclined to run shall have its inner side turn to external before washing. 易起球或脫絲的衣物,請先翻至內面再進行洗滌。

Please remove soil or dirt from laundry before washing. 洗滌前,請先將衣物上的泥沙 除去。

The vulnerable laundry shall be put into the wash string bag before washing. 洗滌容易損傷的衣物時,請放入洗衣袋中進行洗滌。

To be cautious, please put the laundry with lace or the woman underwear with steel wire into the optional wash string bag before washing.

[董重起見,請將帶蕾絲的衣物或帶

慎重起見,請將帶蕾絲的衣物或帶 鋼絲的女性內衣放入市面出售的洗 衣袋中清洗。

Prevent the laundry from damaging by accident.
 防止衣物意外受捐。

Make sure the decoloring possibility

確認有否脫色

 Please make sure the decoloring possibility of the laundry. Dip the white towel with the detergent, use it to wipe the inconspicuous part of the laundry, and observe whether the towel is attached with color. Don't wash the laundry that decolors.

請事先確認可能脫色的衣物是否會脫 色。用白色毛巾沾上洗衣液,在衣物 不顯眼處用力擦拭,觀察毛巾是否染 上顏色。不能對脫色的衣物進行洗滌;

The laundry from which the silk is inclined to run shall be put into the string bag before washing.

易脫絲的衣物請放入洗衣袋中

清洗。
The laundry made of corduroy or other particular cloth, and the black hose or other clothing sensitive to silk-running shall be put into the optional antisilk-running string bag before washing.

像燈芯絨等特殊布料或黑色長襪等 容易脫絲的衣物,請放入市面出售 的防脫絲洗衣袋中清洗。 Remove anything from the laundry before washing. Do not forget anything in pocket (matches, hairpins or coins etc.).

洗滌前,請先取出衣服中的異物。不要忘記口袋中的東西 (火柴枝、髮夾、硬幣等硬物)。

Please handle the dirt as early as possible. 請盡早處理污垢。

 
As it's hard to remove the dirt after adhering to laundry for long, the dirt shall be under clean out and handling with detergent before washing, which brings better washing effect.

污垢長時間附在衣物上會很難脫落,在洗衣前先清洗污垢並用洗 衣粉處理,洗衣時效果會更加明 顯。

● How to put laundry in 衣物的放入方法

Put bulky or floating laundry in basket first. 大件衣物或易浮起的衣物應先放入洗衣槽。

- It smoothes rotation of the laundry. 有利於衣物的良好旋轉。
- Prevent splashing of water.
 防止水滴飛濺。



The bluejeans and other thick cloth shall be evenly distributed in the washing basket before washing. (Prevent the laundry from overflowing during washing) 將牛仔褲等厚布料衣物均匀地放入洗衣槽內再進行清洗。(防止脱水時衣物溢出)

Prevent splashing of water.
 防止水滴飛濺。





Use Guidelines 使用中的注意事項

Do not remove the plug of power supply during the operation.

運轉過程中,請勿拔掉電源插頭。

 Lest the washing machine will be in trouble.
 Make sure the operation is suspended or the power supply is cut off before removing the plug.

以免引起洗衣機故障。請務必暫停運轉或切斷 電源開關後,再拔掉電源插頭。

Do not add excessive amount of detergent. 請勿投入過量洗衣粉。

- Excessive detergent won't improve the washing effect much.
- 投入過量洗衣粉,洗衣效果並無多大改變。
- Instead, it will cause insufficient rinse and lead to some problems due to excessive foams. 相反會造成沖洗不充分,以及因泡沫過多而引起某些問題。

Don't be close to television or radio. 請勿靠近電視機或收音機

• It may interfere with the television or radio. 可能會對電視機或收音機構成干擾。

The power supply switch is in ineffective condition after the power supply is cut off and before the Mode LED extinguishes. 切斷電源後,程序指示燈尚未熄滅前,電源開關處於無效狀態。

To switch on the power supply, it is recommended to press the power supply switch again after the LED extinguishes.
 想再次接通電源時,應待指示燈熄滅後再按下

Attention on dewfall.

結露時應注意。

雷源開關。

• Since the humidity is high in summer, there will be dewfall outside the washing machine when washing with cool water, which may damp the floor. Please pay attention to it. 由於夏天濕度較高,當用冷水進行洗衣時,會在洗衣機外側出現結露現象,有可能會將地板弄濕,請加以注意。

Attentions in continuous operation. 連續運轉時應注意。

- Manually set the washing time as "12 minutes", operate the washing machine for over 3 consecutive cycles, the protective mechanism may work and stop the motor.
 - 手動將洗衣時間設定為"12分鐘",連續運轉3個循環以上時,保護裝置可能會起作用而使馬達停止運轉。
- If continuous operation is necessary, please restart the operation of the washing machine after about 30 minutes.

需連續運轉時,請隔 30 分鐘左右再重新啟動 洗衣機。

Do not put in excessive clothes. 請勿投入過多衣物。

• It may cause overflow of the clothes during washing.

The placement of washings please see page 15.

有可能造成衣物在洗衣過程中溢出。 衣物的放入方法 了 15

After spinning, the lock-in function of the lid is unlocked, but the basket will remain rotating for over 15 seconds.

脫水結束後,機蓋鎖緊功能被解除,但洗衣槽還 會旋轉 15 秒以上。

Stop use immediately and please request repair.

立即停止使用並請專人維修。

Do not use sharp-edged article to press the buttons.

請勿使用鋒利的物品來按按鈕。

• Lest the buttons be damaged or in trouble. 以免造成破損或故障。


When washing the thick clothes such as jersey, the oblique of the clothes in the basket is liable to cause the security problem.


洗滌運動衫等厚衣物時,由於衣物在槽內偏斜,較易導致安全開關啟動。



Technical Description

各部件名稱

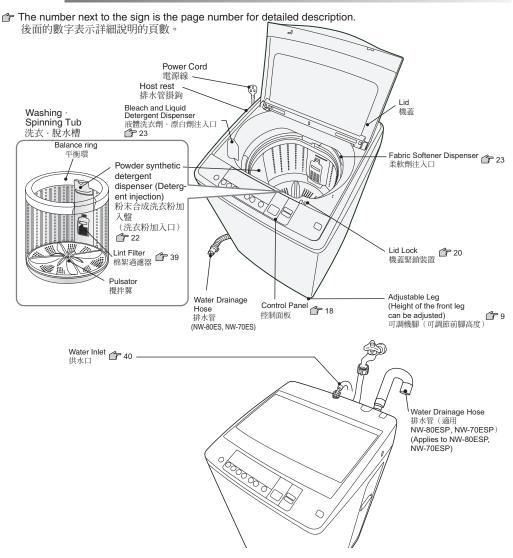

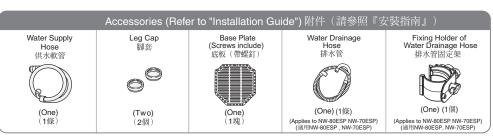



Washing Process Indicator 洗衣内容表示

The indicators of washing, rinsing and spinning display the ongoing process and its duration.

洗衣、漂洗、脱水各相應指示燈的顯示,告知您正在進行的洗衣程序和 洗衣時間。

. During the washing machine operation, the display (lighting, flashing, darkening) of indicator of each process describes the operation status and the working process to the user. 洗衣機在運行過程中,通過各進程指示燈的顯

示(點亮、閃爍、熄滅)告知你程序的運行狀況





NW-80ESP, NW-70ESP

Detergent Indicator 洗衣劑量表示

The detergent amount and the water level are described by the lighting or flashing of indicator. The amount of detergent refers to the (concentrated) powder detergent. 21

通過指示燈的點亮或閃爍來顯示洗 衣劑量和水位。洗衣劑量表示的是 (濃縮)粉末洗衣劑。 21



及其淮程。



NW-70ESP. NW-70ES

Lid Lock Indicator


Lid Lock indicator will light when the lid is in locked status. 機蓋鎖緊時,指示燈亮起

· Before the water supply, the lid is in the status of locking. 開始供水前,機蓋處於鎖緊狀態。

Air Jet Indicator

Please select the proper air-jet duration in compliance with the air-jet level required to the laundry. The indicator lights to describe the air-jet duration.

根據對衣物的風乾程度,請選擇相應的風乾時間。通過各指示燈 閃爍,顯示出風乾時間

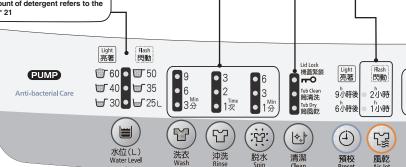

Set the water level manually or replenish water during the agitating.

- 在按照自己需要設置水位或在攪拌過程中 想再注水時使用。
- · After the washing machine starts, any change of setup shall be made before the end of washing and rinsing. Before making the change, please press the "Pause" button. (When water is supplied before it reaches the required level, the setup can't be changed) 洗衣機啓動後,若需更改設置,請在洗衣、 漂洗結束前進行。在進行變更操作前,請 先按下『暫停』按鈕。(從開始進水到到 達規定水位的過程中不能更改設置)
- · Press and hold the "Water Level" button to replenish water during the course of washing or rinsing. (No water will be replenished after reaching the top water level of each process) 洗衣或漂洗過程中若要再注水,請持續 按住水位按鈕,即進行加水。(達到各程 序的最高水位後便不再進水)

/ash ⋅Rinse ⋅Spin Buttor

Set the processes of washing, rinsing or spinning manually or change the setup.

- 在按照自己需要設置洗衣、漂洗 脱水方式或更改設置內容時使用。 After the washing machine
- starts, any change of setup shall be made after the operation comes to a pause. During the course from starting the water supply to reaching the required level, or after the end of washing, the setup can't be changed. (There're also processes allowing no change **36~37**)

洗衣機動動後若需要更改設置。 必須在暫停運行後更改。從開始 進水到到達規定水位的過程中, 或洗衣結束後,不能更改設置。 (也有不能進行更改的程序

36~37) Setting injection rinse in NW-80ES, NW-70ES (NW-80ES, NW-70ES可設定注水

Clean Button


Set the Tub Clean and Tub Dry. 在設置筒清洗及筒風 乾時使用。

The button is used to preset the operation time 2 30~31 預校運轉時使用

- 30~31The washing process can be set to finish in three, six or nine hours 洗衣可預校在9小時 後、6小時後或3小時 後完成。

「Normal」,「Soak」 「Speedy」, can be used with time. 『標準』、『浸 洗』、『快速』可 設定預校。

Set the air-jet duration. 在設定風乾時間 時使用。

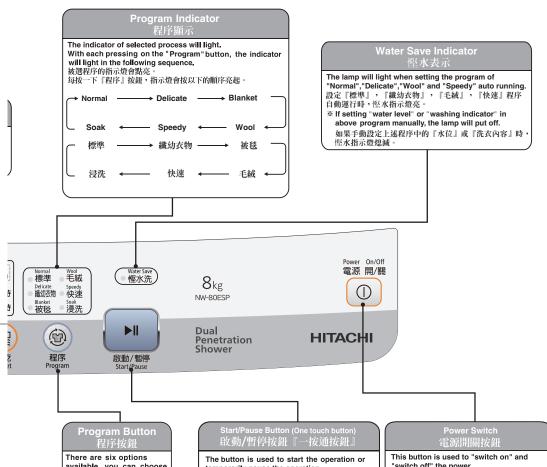

available, you can choose the right one based on the types and dirty levels of the

washings. 24 備有6種程序,可根據衣物的 種類和髒污程度來選擇適合的 程序。 👚 24

 By pressing the "Program" button, the indicator of the selected program will light. 按動『程序』按鈕,所選擇的 程序指示燈會點亮。

temporarily pause the operation. 控制洗衣機啟動或暫停時使用。

- · After selecting the required process, press this button to start or pause the process operation. 選擇好需要的程序後,按此按鈕可啟動或暫停執 行程序。
- . If press the "Pause" button during the course of spinning, no signal can be received until power is switched off, and the lid can't be opened. 如脫水過程中按下暫停按鈕後,到開關斷開爲止 都不能接收任何按鈕信號,機蓋亦不能打開。

"switch off" the power.

用於電源的『開』和『關』 When the washing cycle finishes, the buzzer beeps and the power of the unit will be

switched off automatically. The washing machine will be automatically switched off after 5 minutes of no start with power on. **4**5 電源自動關閉功能運行結束後,洗衣機發出

蜂鳴聲並自動切斷電源。接通電源後,不啟動洗衣機,將其放置5分鐘後也會自動關閉 電源。 👉 45



Control Panel (continued)

控制面板(續)

Lid Lock Function 機蓋緊鎖功能

The lid will be locked automatically when washing for children's safe.

爲防止意外傷害及保護兒童的安全,洗衣過程中供水開始後,洗衣機會自動將機蓋鎖緊。

Attention 注意

- With the set of Lid Lock function, the washing machine can't operate if the lid is opened. (The control
 panel will release the alarm if the lid is opened)
- 設定機蓋緊鎖功能後,洗衣機不能在機蓋處於開啟狀態時運轉。(機蓋處於開啓狀態時,控制面板將發出警報)

※Factory initial state for "safe mode". 出廠初始狀態爲"安全保護模式"。

Remove Safe Mode 解除安全保護模式

- 1 Press "Power On/Off" button ① .
 - 按下『電源開/關』按鈕 ①)。
- **2** Press and hold down the "Wash" button for at least three seconds, then the safe mode can be removed. 持續按住『洗衣』按鈕 智 3 秒鐘以上,可解除安全保護模式。
 - Press and hold down the "Wash" button for at least three seconds again to set the safe mode.
- 再持續按住『洗衣』按鈕(晉)3秒鐘以上,可設定安全保護模式。 Cut off the power supply. 切斷電源。

When you want to open the lid 想打開機蓋時

Press "Start/Pause" button 🗾 💶 Lock will be removed automatically after washing. Lid can be opened.

按下『啟動/暫停』按鈕 ▶ □ ■ ■ 旋轉結束,鎖緊解除,可打開機蓋。

When beginning again 再啟動時

With the set of safe mode, the lid will be locked as the washing machine restarts.

Without the set of safe mode, the lid will be locked automatically during the course spinning.

在設定爲安全保護模式時,洗衣機再啟動時機蓋會立即被鎖緊。

若沒有設定安全保護模式,在脫水時機蓋會自動鎖緊。

How to switch off the buzzer sound

希望消除洗衣結束的蜂鳴聲時

Follow the below steps to switch off the buzzer sound after the completion of washing process. 按以下順序進行操作,可消除洗衣結束的蜂鳴聲。

1 Press the power button.

接通電源開關。

Press and hold down the Start/Pause button for at least three seconds, the buzzer sound can be switched off.

持續按住啟動按鈕3秒鐘以上,蜂鳴聲消除。

You can press and hold down the Start/Pause button for at least three seconds to recover the beeping.
 接通電源開關後,持續按住啟動按鈕3秒鐘以上,可將蜂鳴聲恢復。



Checking Amount of Laundry and Detergent (Approximate Amount) 檢測洗衣量和洗衣粉量(大致用量)

Checking amount of laundry 洗衣量的檢測

Select the program required for washing after put in the laundry, and press the "Start" button. The sensors begin to detect the weight of laundry, and the necessary detergent amount (approximate amount) and water level are displayed correspondently. (The detection is not included in the programs of "Speedy", "Wool", "Blanket", "Delicate", "Clean" and "Air Jet".)

放入衣物後選擇洗衣所需程序,按下『啟動』按鈕,傳感器開始檢測衣物重量,並相應顯示所需的洗衣粉量(大致用量) 和水位。(『快速』、『毛絨』、『被毯』、『纖幼衣物』、『清潔』、『風乾』程序不進行檢測。)


1 Put the laundry in, turn the power ON, choose the appropriate program, and press the "Start" button. 放入衣物・按下電源開闢按鈕。 選擇洗衣所需程序・按下『啟動』



 The pulsator rotates with absence of water to check the washing load (cause no damage to clothes) 提件翼在無水狀態下旋轉,檢測洗衣量。 (不會損傷衣物)

2 Display the necessary detergent amount and water level.

顯示所需的洗衣粉量和水位。

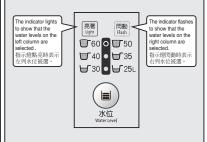

3 Put the detergent in. (**22~23**) 放入洗衣粉。 (**22~23**)

- Put detergent, fabric softener, bleach, and close the lid. 放入洗衣粉、柔軟劑、漂白劑後,請關 閉洗衣機機蓋。
- After the display of the detergent amount and water level, please add in detergent in one minute, and close the lid, otherwise it will sound alarm. (at that time, if the "Water Level" button is pressed, the washing machine will not wait any more and start rotating)
 顯示洗衣粉量和水位後,請在1分鐘內

顯示洗衣粉量和水位後,請在 1 分鐘內 放入洗衣粉,並關閉機蓋,否則將響起 警報。(此時若按下"水位"按鈕,則 洗衣機不再等待而立即開始旋轉)

 After the washing basket is filled with water or begins operating, the replenishing detergent shall be thrown into the basket directly, 洗衣槽中有水或運轉開始後,如要增加洗 衣粉,請將洗衣粉直接倒入洗衣槽中。

Approximate amount of laundry 衣物的大致重量



Briefs (Cotton 50g) 男用內褲(棉約 50g)

Socks (Cotton 50g)

 
Towel (Cotton 70g)

毛巾(棉約70g)

襪子(棉約50g)



Long-sleeved vest (Cotton 150g) 長袖內衣(棉約 150g)





Bath towel (Cotton 300g) 浴巾(棉約 300g)

Pajama (Top and bottom) (Cotton 500g)

睡衣(上、下)(棉約500g)





Sheet (Cotton 500g) 床單(棉約 500g)

- Laundry load varies according to different taps, sizes and thickness of cloth. Approximate weight of laundry is shown in ().
 表中()內所示的是一件衣物的大致重量。由於洗滌的衣物種類、大小、厚度各有不同,因此洗衣量也有所不同。
- When washing normal clothes, the appropriate amount of washing load is about 70 to 80 percent of the amount indicated. In case the agitator stops which indicates overload, please check and if necessary, adjust the load.
 如為一般女物,其洗衣量為表中所示値 70%~80% 最為恰當。者權拌停止,表示放入的衣物過多,請檢視衣物旋轉情況並予以調整。

Amount of detergent (Approximate amount) 洗衣粉量(大致用量)

The display of detergent amount (approximate amount) refers to the amount added with the measuring spoon in the package of concentrated power detergent. 洗衣粉量(大致用量)的顯示是指濃縮粉末洗衣粉包裝盒中計量匙的加入量。

- The usage benchmark of detergent amount (approximate amount) is the capacity of one measuring spoon (about 37g). (Other detergent → 22)
 洗衣粉量 (大致用量) 的使用量是以計量匙一匙(約37克)爲基準。(其他洗衣粉●22)
- The capacity of measuring spoon depends on the brand of detergent, so please refer to the description on the detergent package.
 計量匙的大小按洗衣粉品牌不同而不同,詳情請參照洗衣粉包裝上的說明。
- The diagram example of detergent measuring spoon only stands for the approximate amount. 洗衣粉計量匙的圖示只表示大致用量。





Please put in the detergent as much as 80% of the capacity of measuring spoon (about 30g). 請放入計量匙80%左右(約 30克)的洗衣粉。



How to Use Liquid Detergent, Bleach and Fabric Softener

洗衣粉、漂白劑、柔軟劑的使用方法

Start the washing machine with water in the washing basket, and the infiltration washing can't perform then. Please put the detergent in the washing • spinning basket. 在洗衣槽有水時殷動洗衣機,不能進行渗透清洗。請將洗衣粉放入洗衣 • 脫水槽內。

		Synthetic detergent 合成洗衣劑				
Amount of Laundry	Water Level 水位	Concentrate 濃縮型	ed detergent 洗衣劑	Regular detergent 一般洗衣劑		
洗衣量		20g for 30L of water (Powder) 水位 30L 需 20g (粉末)	25mL for 30L of water (Liquid) 水位 30L 需 25mL (液體)	40g or 40mL for 30L of water (Powder, Liquid) 水位 30L 需 40g 或 40mL (粉末丶液體)		
8.0kg (%NW-80ESP, NW-80ES)	60L	40g 🗍	50mL	80g (80mL)		
7.0kg (%NW-70ESP, NW-70ES)	59L	39g □	49mL	79g (79mL)		
5.0kg	50L	33g 🖵	42mL	67g (67mL)		
4.0kg	40L	27g 🖵	33mL	53g (53mL)		
3.0kg	35L	23g —	29mL	47g (47mL)		
1.5kg	30L	20g 🖵	25mL	40g (40mL)		
0.5kg	25L	17g ₩	21mL	33g (33mL)		

- Please refer to the description given by the detergent manufacturer for the usage amount and the details of detergent. 洗衣粉的使用量,詳細情況請參照洗衣粉生產廠家的說明。
- The list of detergent amount (approximate amount) in this table takes the measuring spoon in the package of concentrated synthetic detergent as benchmark. (20g detergent for 30L water)
- 本表中洗衣粉量(大致用量)的表示,以濃縮合成洗衣粉包裝中的計算匙爲基準。(水位 30L 使用 20g 洗衣劑)

 If laundry is only lightly stained, use only half of the amount of detergent.
- 如果衣物只是輕微有些髒,則洗衣粉量爲上表所示值的一半爲宜。
- The excessive usage of detergent brings no more cleanness but the side effect of insufficient rinsing. 使用過多的洗衣粉並不能增加洗衣的潔淨度,相反會引起沖洗不充分而導致弊端。

Powder synthetic detergent 粉末合成洗衣粉

■ Put the detergent in the detergent dispenser 將洗衣粉放入洗衣粉加入盤內



The detergent dispenser can be opened as much as about 50 degrees. Any action to open it by force may cause damage. 洗衣粉加入盤只能打開 新 50 ° 的角度。強行 打開可能會造成損壞。



Notes 備注

- When water is adhering to the detergent dispenser, please wipe it first. 洗衣粉加入盤有水滴時,請擦乾水滴後注入洗衣粉。
- When the detergent adheres to the dispenser, it remains even the dispenser is closed. If the detergent still adheres to the dispenser after 2 or 3 times of repetitive open and close, please remove the dispenser for cleaning up. (() + 41)
 洗衣粉點前在磐上時,即使關閉,洗衣粉也會發宿在加入線內。反復閉關圍 2 3 次後仍然附在加入磐上時,請拆下加入磐進行清洗。(() + 41)
- Please pay attention to keep the detergent away from the injection opening of fabric softener, so as to avoid malfunction.

 請注意避免將洗衣粉注入柔軟劑注入口內,以免引致故障。
- Some types of detergent may be hard to dissolve.
- In this case, please inject the detergent into the washing basket directly after it sufficiently dissolves. 有些種類的洗衣粉可能較難溶解。
- 此時,待洗衣粉充分溶解後請直接將其注入洗衣槽內。
- The operation can begin only after closing the detergent dispenser. The laundry may be damaged under the operation with the dispenser open. 請務必關閉洗衣粉加入盤後才可進行運轉。在加入盤開狀態下運轉,很可能會損傷衣物。

■ How to install the detergent dispenser 洗衣粉加入盤的安裝方法

Insert the pin into the pin hole at the injection opening. 將洗衣粉加入盤的銷釘分別插入注入口兩端的銷釘孔內

■ How to uninstall the detergent dispenser 洗衣粉加入盤的拆卸方法

- ① Bend the detergent dispenser. 彎折洗衣粉加入盤。
- ② Disassemble the pin off the pin hole. 將銷釘從銷釘孔中卸下來。





Liquid detergent/Bleach 液體洗衣劑 / 漂白劑

Liquid detergent 液體洗衣劑

Dilute the liquid detergent with water and gently pour it into the injection opening.

將液體洗衣劑用水均匀稀釋,由注入口慢慢倒入。

When using preset operation, dilute the detergent with twice the amount of water.

預校運轉的時候請稀釋成二倍後再使用。

Bleach 漂白劑

Dilute the bleach with water before the washing and gently pour it into the injection opening.

開始洗衣時,先用水稀釋,然後由注入口慢慢倒入。

Attention 注意

- Follow the instructions for the liquid detergent and bleach on the labels for the usage amount and method to use 關於液體洗衣劑和漂白劑的使用量和使用方法,請參照其相關
- Please do not pour bleach directly onto the items being washed. Otherwise, it may cause discoloring and damage the clothes. 請避免將漂白劑直接用於衣物上,以免引起變色或布料損壞。

Liquid detergent and bleach



Fabric softener

柔軟劑

Open the cap of the fabric softener dispenser. 打開柔軟劑注入口的蓋子



- Softener filling dispenser can only be opened by an angle of up to 120°. Forced operation may damage the filling dispenser. 柔軟劑注入口只能打開約 120°的角度。確行打開可能會損壞注入口。
- Close the cap of the fabric softener dispenser. 關閉柔軟劑注入口的蓋子
- Please note that the cap of fabric softener dispenser should be closed. 請務必關閉柔軟劑注入口的蓋子才可進行運轉


<Approximate amount of fabric softener>

<柔軟劑的大致用量>

Water level 水位		25L	30L	35L	40L	50L	59L	60L
oftener	Concentrated type	6	7	8	9	11	13	14
	濃縮型	mL						
Fabric s	Regular type	17	20	23	27	33	39	40
楽劇	普通型	mL						

Pour the fabric softener into the dispenser in accordance with the indication of water level before the washing starts.

 洗衣開始前,按照水位表示,將柔軟劑倒入柔軟劑注入口內



- · When you find it difficult to pour the fabric softener into the dispenser, push the basket to one side to pour the fabric softener in. 當柔軟劑不易倒入注入口時,請將洗衣槽偏向一側後再倒入柔軟劑。
- Fabric softener will be dispensed into the basket during the final rinse.

柔軟劑會在最後一次漂洗前自動投入槽內。

- · Dispensation of the fabric softener is performed automatically by the rotation of the spinning basket. The fabric softener moves in gradually during the spinning and reaches the basket before the final spinning. 柔軟劑是利用脫水槽旋轉而自動投入槽內的,在中間脫水過程中,柔 軟劑從注入口移向內部,直至最後脫水結束前投入槽內。
 - Concentrated detergent: 6.6mL for 30L of water 濃縮型柔軟劑: 水位 30L 使用量 6.6mL
 - Normal detergent: 20mL for 30L of water 普通型柔軟劑:水位 30L 使用量 20mL

Notes 備注

- The concentrated type easily solidifies. Please use twice the amount of water to dilute such fabric softener. 濃縮型柔軟劑易於固化,因此請用 2 倍清水將其稀釋後再使用。
- Once consumption of the softener shall be less than 45ml. Excessive consumption of the softener instead prevents it from being effective.
 柔軟劑的 "一次使用量" 應低於 45mL ,使用過多的柔軟劑反而不能有效發揮作用。
- Please do not leave the fabric softener in the basket for an extended period (12 hours) as the fabric softener may solidify and cause malfunction.
 請勿讓柔軟劑長時間(超過12小時)停留在洗衣槽內,以免柔軟劑在注入口中固化,導致洗衣機運轉不良。
- · When the washing machine or the basket is tilted, water may flow into fabric softener dispenser. (Thus fabric softener performance will be re-若洗衣機傾斜或供水時洗衣槽傾斜,水可能會流進柔軟劑注入口。(導致柔軟劑失去其應有的作用)
- · Please use an appropriate amount of detergent. Too much fabric softener may result in poor rinsing and fabric softener performance. 請使用適量的洗衣劑,使用量過多會降低漂洗效果和柔軟劑的效果。

Selection of Laundry Program

洗衣程序的選擇方法

The washing machine have six laundry courses.

Please select the appropriate detergent and course for laundry according to the table below.

本洗衣機備有6種洗衣程序:

請參照下表,根據衣物種類和髒污程度選擇適合的洗衣程序。

Type of laundry 衣物種類

Recommended Automatic Program 建議的全自動程序

Control Panel Display 控制面板顯示

Recommended Detergent 推薦的洗衣劑

Regular laundry 一般的衣物





Normal 標準

Automatically select the program suitable for washing. 以適當洗滌物的方式, 進行自動洗滌。



Powder synthetic detergent 粉末合成洗衣粉

Delicate laundry 精細的衣物



Delicate 纖幼衣物

Delicatly wash with soft current.

利用柔和水流精心洗 滌。



Liquid detergent 液體洗衣劑

Bulky laundry 大件衣物



Blanket 被毯

Delicatly wash with rotating current. 利用旋洗水流精心洗滌。



Neutral liquid detergent 液體中性洗衣劑

Clothes with dry-clean or dryclean and hand wash label 有 (無) (無) (無) 根誌的衣物





Wool 毛絨

Delicatly wash with swing current. 利用回轉水流精心洗滌。



Special detergent used in clothes with dry-clean label 乾洗標誌衣物 專用洗衣劑

Clothes wearing for short period of time and without dirt 短時間穿著且無污漬的衣物





Speedy 快速

Clean up laundry with fastest mode. 以最快速的方式來清 洗衣物。



Heavily stained laundry 嚴重污垢的衣物





Soak 浸洗


Wash with special soaking current. 運用特設的運動浸泡水流進行洗滌。



Power synthetic detergent 粉末合成洗衣粉

Liquid detergent 液體洗衣劑

※ Above control panel demonstration content take NW-80ESP as an example.
以上控制台顯示內容以 NW-80ESP 爲例

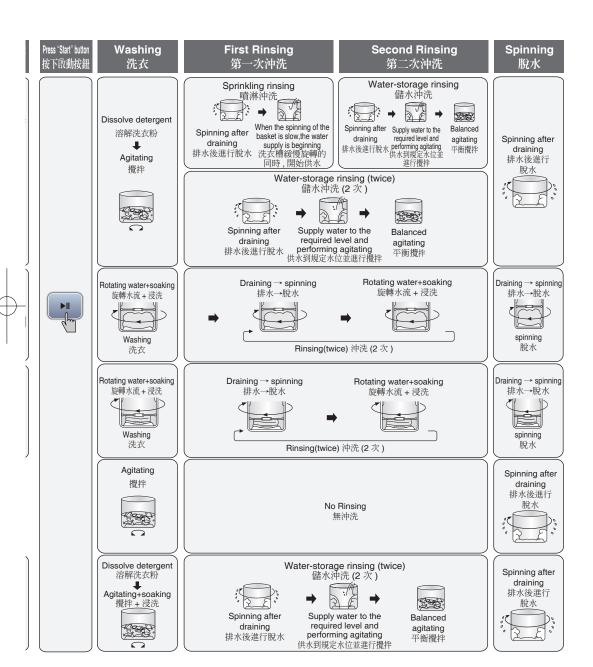



Content of the Washing Program

洗衣程序的內容

- This part describes the process of each Program. 本部分對各洗衣程序的過程進行說明。
- () indicates it may be manually switched within the range contained in the bracket by pressing the buttons. No () means no switch.

()中表示用各按鈕可切換的範圍。無()表示不能進行切換。



Program	Program Automatic setup of water level Washing		Rinsing 沖洗		Spinning	Required duration (approximate)
程序	自動設定的水位	洗衣	Round 1 第一次	Round 2 第二次	脫水	所需時間 (大約)
Normal	60~25L	18~15min	Sprinkling rinsing 噴淋沖洗	Water-storage rinsing 儲水沖洗	6~3min	FO
一 標準	(60~25L) ** NW-70ESP 59~25L NW-70ES (59~25L)	(15~3min)	(儲水) ** NW-80ES, NW-70ES (Wa	e rinsing 1~3 times) 中洗1~3次) ter-storage or water-injection 計水或注水沖洗1~3次)	(9~1min)	53min (68~33min)
	40L		Water-storage rinsing 儲水沖洗	Water-storage rinsing 儲水沖洗		
Delicate 纖幼衣物	(60~25L) * NW-70ESP 59~25L NW-70ES (59~25L)	9min (15~3min)	(儲水沖 ※ NW-80ES, NW-70ES (Wa	rinsing 1~3 times) 可洗1~3次) iter-storage or water-injection 背水或注水沖洗1~3次)	3min (9~1min)	41min (74~30min)
Blanket 被毯	60L (60~25L) ** NW-70ESP 59~25L NW-70ES (59~25L)	25min	Water-storage rinsing 儲水沖洗	Water-storage rinsing 儲水沖洗	6min (9~1min)	70 min (70~61 min)
Wool 毛絨	30L (35~25L)	9min	Water-storage rinsing 儲水沖洗	Water-storage rinsing 儲水沖洗	1min	36min
	no rinsing 無沖洗					
Speedy 快速	25L (35~25L)	3min (15~3min)	(Water-storage rinsing 1~3 times) (儲水沖洗1~3次) ※ NW-80ES, NW-70ES (Water-storage or water-injection rinsing 1~3 times)(儲水或注水沖洗1~3次)		3min (9~1min)	12min (45~20min)
Soak 浸洗	60~25L (60~25L) ** NW-70ESP 59~25L NW-70ES (59~25L)	60 min	儲水沖洗 (Water-storage (儲水沖	Water-storage rinsing 儲水沖洗 rinsing 1~3 times) v洗1~3次) ter-storage or water-injection 情水或注水沖洗1~3次)	6min (9~1min)	105min (127~90min)

※The above table is based on NW-80ESP. 上表以 NW-80ESP 爲基準。

■ Time required for washing 洗衣所需時間

- The washing time includes the time of charging (volume of 15L per minute) and draining (standard condition).
 洗衣時間包括供水時間(供水量每分鐘15L)和排水時間(標準狀態)。
- The washing time depends on the water pressure, washing quantity and drainage condition etc.
 金田也中国地域上版、サイトライル社会及中学国主義がレース会社中で、
- 「所需時間隨水壓、洗衣量和排水條件等因素變化而變化。
 In the "Normal", "Soak" Programs, the washing machine determine the optimum washing mode by checking the load and texture of the washings. The time shown in the above table are ones in standard condition. (marked with □). 在『標準』、『浸洗』程序中,洗衣機通過檢測洗滌量和質地,決定最佳洗衣方式。上表所示時間爲標準狀態(用 □ 表示)下的時間。
- There are certain errors between the "washing time" &
 "spinning time" and the actual operation time.
 "洗衣時間"、"脫水時間"於實際運轉時間存在一定誤差。
- Some Programs, the washing machine will stir the clothes for after final spinning for fluey effect. (stirring may not be made for some washing loads.)

有些程序在最終脫水結束後,會進行攪拌以理順衣物,達到 蓬鬆。(有的洗衣量不能進行此攪拌)

■ Change of the options in the Programs 關於更改程序內容

- () indicates it may be manually switched within the range contained in the bracket by pressing the buttons.
 () 中表示用各按鈕可手動切換的範圍。
- Öptions in modes can't be changed after the completion of the "washing" process.

 When the state of the state of
- 不能在"洗衣"過程結束後更改程序內容。
- Changes can't be made during the period from the beginning of charging to the time when the level of charged water reach the stated standard.
 - 從供水開始到水位達到規定水位的過程中,也不能進行更改。

■ Switch of Programs 關於切換程序

 Processes can't be switched after the starting of washing machine. If it is necessary to switch, please cut off the power supply first, and then proceed with the switch. 不能在啟動後切換程序。如需更改,請切斷電源後再進行程 [24]]



Program Description

各程序的說明

Delicate Program 織幼衣物程序

Not suitable for washing laundries below:

不宜洗滌下列衣物:

Laundries with Dry clean label and out of hand wash label.

僅有 ⋘ 標志而無 ₩ 標志的衣物。

Laundries with fur material except for sweaters of wool.

(high-quality cashmere, Angora, mohair and alike)

(Ingli-Quality cashinere, Angola, monali and and ance) 羊毛以外的獸毛材料的衣物。(高級主緒、安哥拉兔毛、馬海毛等)

Laundries with lace embroidery knitted by special method. 蓄絲繡花等特殊編織方法制成的衣物。

In case of laundries too wrinkle or heavy dry by spinning, please set shorter spinning time by pressing "Spin" button.

擔心衣物因脫水出現皺褶或被過度絞乾時,請按『脫水』 按鈕設定較短的脫水時間。

■ The laundry amount is below 1.2kg. 洗衣量在 1.2kg 以下。

After washing 洗滌結束後

Prevent the knitted sweater and alike from distorting please pay attention when drying. 羊毛衫等毛織品衣物,爲防止其變形,晾曬時應特別注意。

 Woolen sweater can be flattened out on a lever board for drying and sunning to prevent distorting.

可將羊毛衫攤平在平整的木板上 晾曬,以防止其變形。



Speedy Program 快速程序

- ※ This program is designed for washing clothes only with sweat but no dirt in summer. 本程序是為洗滌夏季含有汗水但無污漬的衣物而設計的專用程序。
- ** This program will not rinse in full automatic mode, so no detergent, fabric softener, bleach are required. If it is necessary to use them, be sure to make manual setting or select other program.

在全自動運行時,本程序將不進行沖洗,因此請勿加入洗衣劑、柔軟劑、 漂白劑。

如果確實有必要使用時,請進行手動設定,或選擇其他程序。

Wool Program 毛絨

The "Wool" program applies the mode of basket rotation, which uses the rotating water in the basket to wash the fine cloth with \\display | label and the laundry with \(\begin{align*} \frac{1}{2} \end{align*} \] label gently.

『毛絨』程序採用洗衣槽旋轉的方式,利用槽內的旋轉水流,對有 🔟 標誌的精細衣物和有 🗪 標誌的衣物進行柔和的 浩滌。

■ Please note that the washing cap can be used in "Wool" program 用『毛絨』程序洗滌衣物時,請使用洗衣蓋

※ The washing cap is the optional part 洗衣蓋是另售部件

Because this program imitates the dry cleaning that handles the laundry without external force, please remove the oil contamination, the dirt and the color spot off the laundry.
 由於本程序模仿乾洗,不使用外力對衣物進行洗滌,因此請事先除掉衣物上的油污、泥垢及色斑等。

Some laundries can't be washed due to the cloth materials.
 也有因布料原因而不能進行洗滌的衣物。

Please use special detergent (liquid) to wash clothes with Dry clean label.
 洗衣標誌中有(高) 標誌的衣物,請用乾洗衣物專用洗衣劑(液體)進行洗滌。

Please use neutral liquid detergent (liquid) to wash clothes with Hand washing label.
 有量標誌的衣物,也可用中性洗衣劑(液體)進行洗滌。

Do not use other detergent except liquid detergent.
 除液體洗衣劑外,請勿使用其他洗衣劑。

Do not use Bleach.

請勿使用漂白劑。

- The bleacher is of strong alkalinity and will do harm to the clothes.
 漂白劑具有強烈鹼性,會損傷布料。
- Pre-defined operation is not available in the "Wool" program.

"毛絨"程序不能進行預校運轉。

As to the laundry that highly shrinks after washing, the pattern paper shall be prepared in advance in order to get the laundry back to the original size.

對洗滌後縮水嚴重的衣物,事先應準備好其紙樣,以便將衣物重新恢復到原有尺寸。





Program Description (continued)

各程序的說明(續)

Laundries that can be washed 能洗滌的衣物

Among the signs of clothes' washing methods 衣物的洗衣標誌中

With Hand wash label 有 🕍 標誌的

With Dry clean label 有 (約) 標誌的

- The sweater, the knitted sweater (high-quality cashmere, mohair and alike)
 毛衣、羊毛衫(高級羊絨、馬海毛等)
- The trousers, the skirts
- The overall, the shirt, the one-piece dress (silk, flax and alike) 罩衫、襯衫、連衣裙(絲綢、
- · The school uniform, the sailor uniform 學生服、海員服
 - ※ Even the laundry with (超満) label, laundries may not be washed. Please refer to "Laundries that can not be washed" at the right side.

即使有(乾洗)標誌的衣物也可能不能洗滌。

請參照右邊的"不能洗滌的衣物"。

Laundries that cannot be washed 不能洗滌的衣物

- · The leather craft or the leather decoration 皮革製品和皮革裝飾品
- The laundries with decoration (feather, fur and alike) 帶裝飾品(羽毛、皮毛等)的衣物
- The rayon, the amino-copper fiber and their mixture 人造絲、銅氨纖維及其混紡物
- The laundries inclined to decolor 易脫色衣物
- The necktie, the suit and the overcoat 領帶、西裝和大衣
- The laundries handled with the coating process, the resin process (with bond), the grain-rolling process (with the raised or sunken patterns) 進行了塗層加工、樹脂加工(使用黏合劑)、軋紋加工(有凹凸花紋)的衣物
- · The laundries applied with the forcefully-contorted fiber (forcefullytwisted wire) such as silk and wool (especially the jacquard and
- 採用 絲綢、羊毛等強力扭曲纖維的衣物 (尤其是提花等)
- The silk, the corduroy and the alike wools 天鵝絨、燈芯絨等毛料
- The laundries with no washing label 沒有洗衣標籤的衣物

Attention 注意

領子或袖口處的油垢

If the laundry is not included in the above list, please wash it with reference to the detergent specification.
 以上並未提及的衣物,請參照洗衣粉說明書進行洗滌。

Make the dirt or the color spot easy to remove 使污垢或色斑等易於清除

Sebum dirt around the collar or the cuffs

• As to the dirt around the fringe of collar, cuffs, lap or pocket, use the brush with detergent to wipe these positions hard

for dirt removal. 對於領子、袖口、下擺或口袋邊緣等處 污垢,可用沾上洗衣液的刷子在上述位 置用力擦拭來清除。



The color spot 色斑

· Underlay the towel at the inner side of laundry, and use the brush with detergent to flap gently and remove the color spot.

可在衣物內面墊上毛巾,用沾上洗衣 液的刷子在色斑處輕輕拍打, 使色斑 脫落。

 


After washing 洗衣結束後

Drying methods 晾乾方法

- Sweaters of wool, Angora and cashmere shall be laid in shady and cool place after dressing to be dried in shade. 羊毛、安哥拉羊毛和山羊絨等毛衣應在整形後,放置於陰涼 處風乾。
- Woolen sweater can be flattened out on a level board for drying and sunning to pre vent distortion.

可將羊毛衫攤平在平坦的木板上晾曬,以防 止變形。





■ Treatment (recovery of the shrinkage and distortion) 處理方法 (縮水或變形的恢復方法)

- Hover the steam flatiron over the clothes, release steam and dress the clothes
- 將蒸汽熨斗輕懸於衣物上,使之噴出蒸汽並整免纏結物形狀。
- After spraying sufficient steam, flatten out and dress the

充分噴過蒸汽後,按紙樣平鋪衣物並整理其形狀。







Blanket Program 被殺程序

The tub rotates and creates "Blanket washing current" and "Soak" program to gently wash comforters, blanket and bed spread.

洗衣槽旋轉產生洗被毯水流,使被褥等物不會遭受過大的力,從而對床罩、被褥、毛毯進行柔和洗滌。

■ Please note that washing cap can be used in Blanket program.

『被毯』程序洗衣時,請使用洗衣蓋。

The washing cap is the optional part. ※ 洗衣蓋爲另售部品

■ Washable Comforter

能洗滌的被子

· Comforters filled with synthetic (polyester) fibre. Quilt (single, less than width 150cm X length 210cm, the weight of the batting in the quilt less than 1.8kg)

Body-contact light quilt (dual, less than width 190cm X length 210cm, the weight of the batting in the quilt less than 1.8kg)

內部棉絮材質爲化學纖維(聚酯纖維)的被子

被子 (單人寬 150cm x 長 210cm 以下,內部棉絮重量不超過 1.8kg) 貼身輕被 (雙人寬 190cm x 長 210cm 以下,內部棉絮重量不超過 1.8kg)

 \bullet Quilt with the interior batting being feather, and with a sign of $\hfill \Box$. $\hfill \hfill \$ (For example: The batt inside the close fitting comforter is 0.5kg) 內部棉絮材質爲羽毛,有□、┪標誌的被子 (例:貼身輕被內部棉絮重量爲 0.5kg)



. Don't wash the comforter with the wool as its batt material inside or the silk as its cover material. 請勿洗滌內部棉絮材質爲羊毛或被套材質爲絲綢的被子。

Washable Blanket

能洗滌的毛毯

- Blankets with label 有 標誌的毛毯
- Acryl or Polyester fiber double breadth elastic blanket, looped pile carpet and woven carpet (less than 180cm(W) x 230cm(L) and single weight not over than 4.2kg) 丙烯酸類或聚酯纖維的雙幅尺寸彈力毛毯、毛圈毛毯、編織毛毯 (寬 180cm x 長 230cm 以下,單件重量不超過 4.2kg)
- Please refer to operation manual of electric blanket for the washing of electric carpet. 電熱毯的洗滌請參照電熱毯使用說明書進行

Other Washable Items 其他能洗滌的物品

- Mattress with label 有 標誌的床墊
- Pillow cases and cushions filled with synthetic (polyester) fibre
 有 一 標誌的枕頭、坐墊(內部棉絮材質爲化學纖維(聚酯纖維))

How to put in comforter and blanket

被子和毛毯的放入方法

Put in the corner first, then the rest of the comforter slowly. 從被角開始,將被子逐漸 放入洗衣槽內。

 


To squeeze air out from the inside of the comforter put it in slowly.

將被子內部棉絮中的空 氣擠出,然後逐漸將其 放入洗衣槽內。













Program Description (continued)

各程序的說明 (續)

After washing

洗衣結束後

■ Method to take out 取出方法

· Opposite to the put-in sequence, pull out the comforter slowly. 與放入時相反,應緩慢將被子拉出。



• The preset operation is not applicable to the "Blanket" program.

『被毯』程序不能進行預校運轉。

· Scrub away tough stains by liquid detergent prior to washing. 被子邊緣等處有嚴重污垢時,請事先用液體洗 衣劑將其清除掉。

Natural Air dry at the place with good ventilation 在良好通風處讓其自然風乾

(About 4 hours are needed to dry the comforter in sunny days) (在晴天曬被子約需4小時)

- When drying the comforter in sun, the frequent turning-over will shorten the drying duration. When drying the comforter in sun, the frequent flap will make the comforter fluffy and comfortable. 晾曬被褥時,若能經常將其翻身會乾得更快。晾曬時,若能經 常拍打被褥,會使棉被蓬鬆舒適。
- Neaten up the oblique batting in the quilt, make the quilt more dry, fluey and comfortable. (in order to prevent deterioration of batting and damage of quilt, please cover the coverlet to protect the quilt) 整理羽絨被中偏斜了的棉絮,可使棉被乾燥並蓬鬆舒適 (爲防止羽絨變質或被子受損,請蓋上被單以保護被子)
- · When the blanket is still wet, use the brush to tease the hair towards one direction, so as to keep the blanket in good looking. 趁毛毯潮濕時,使用刷子將毛朝同 一方向梳理整齊,使之保持美觀。

Dry the blanket so that it can be dried easily 將毛毯呈门形 晾曬,可使之 很快晾乾

Air Jet 風乾

*This program is designed for helping to shorten the drying time after washing.

本程序是爲了縮短衣物晾乾時間而設計的專用程序。

Clothes not suitable for this mode. 不適宜此程序的衣物

- Clothes that cannot be washed by Wool programs. 不能在毛絨程序中洗滌的衣物
- Clothes of easily-fade away colors 易脫色衣物
- Quilt and blanket 被子、毛毯

- Clothes with sign in washing mark 洗衣標籤中有 规模誌的衣物
- Shoes
- 鞋子
- · Easily distorted clothes



Using the Preset for Washing

預校時間洗衣



Put the laundry in and press the "Power

Switch" button .

放入衣物,按下電源開關按鈕 ①。



Press the "Program" button (, select the washing mode.



按下『程序』 按鈕 🕲 ,選擇洗衣方式。

• With each pressing on the "PROGRAM" button, the indicator will light in sequence. 每按動一次『 程序』 按鈕,各指示燈會順次點亮。



Press the "Preset" button 📵 , set the pre-



按下『預校』 按鈕 ④ , 設定預定時間。

- Set the time it will take to finish washing from now. 設定從現在開始多長時間後結束洗衣
- Predefined time can be switched by pressing the "Preset" button.

按下『 預校』 按鈕,可切換預定時間。



按下『啟動/暫停』接鈕



★ Put in the detergent according to the amount and close the lid.

(The sound of buzzer indicates washing completion.) 根據顯示的水位,

放入洗衣粉,關閉機蓋。 (蜂鳴聲響起表示洗衣完畢。)

- · The pulsator to detect the amount of laundry and display on the control panel. 21 攪拌翼旋轉檢測出洗衣量並由控制面板顯示出來。 21
- · Do not use liquid detergent during preset washing. 預校洗衣時,請勿使用液體洗衣劑。


"Clean", "Air Jet" programs. "Wool" "Blanket" * Predefined operation can't be set in "Delicate" 『纖幼衣物』、『毛絨』、『被毯』、『清潔』、『風乾』程序不能設定預校運轉



How to use the "Preset" button (Switched options) 預校按鈕的使用方法(切換內容)

- The preset function allows the finishing time to be set to 6 hours or 9 hours later. This feature comes in handy when you wish to do the washing while you are out or when you wish to do the washing at night and hang out in the morning.

 可將洗衣完成時間設定在6小時後或9小時後,在外出時進行洗衣,或在夜間洗衣早晨晾曬,利用本功能是相當便利的。
- Press the "Preset" button to set the washing content. 按下預校按鈕,設定洗衣內容。

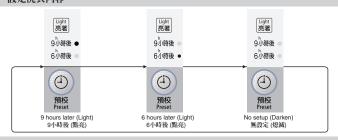

In case of the following cases 车以下槽规下

■ Fix the preset duration: press the "Preset" button ④ .

(With the button pressing and holding, the preset duration will be displayed)

確認預校內容:按下 ① 按鈕。 (持續按下期間,顯示預校內容)

■ Cancel the preset duration: switch off the power "On/Off" button .

取消預校內容:切斷電源開關 ⑩。

Change the preset duration: switch off the power

"On/Off" button , and reset.

更改預校內容:切斷電源開關 🄍 後,重新設定。

(Attention 注意)

- In predefined operation, do not mix the clothes liable to discoloration.
- 預校運轉時,請勿將容易脫色的衣物混在一起洗滌。
- With the power unplugged or cut, the preset program will be canceled. 拔掉電源插頭或停電時,預校程序將被取消。
- The washing time varies with the change of the load and texture of the washings and the volume of the charged water.
 洗衣時間隨洗衣量和質地及供水量的變化而改變。
- To prevent the laundry from corrugating, take it out for drying as early as possible after the end of washing. 為防止衣物起皺,洗衣結束後應盡早取出晾乾。



Using the Washing Water Again

再次使用洗衣劑

Use the Washing Water again 再次使用洗衣劑

1 Laundry with slight dirt 不太懈的衣物

> "Washing" only for the 1st collective of laundries. 對第一批衣物進行"單洗"。



Put in the 2nd collective of laundries, and select the favorite washing mode. 放入第二批衣物,選擇喜歡的洗衣方式進行洗衣。

Set the proper water level for the laundries.
 設定適合衣物的水位。



Rinse and spin the 1st collective of washed laundries.

對第一批已經洗過的衣物進行沖洗和脫水。

Set the proper water level for the laundries.
 設定適合衣物的水位。



Using the Washing Cap

使用洗衣蓋

⚠ Attention 注意



It is prohibited to install the washing cap aslant. In addition, the washing cap is prohibited from being used in other modes except the "Blanket" and "Wool" program.

嚴禁傾斜安裝洗衣蓋。另外,除『被毯』、『毛絨』程序外,嚴禁在其他程序中使用洗衣蓋。

 Lest the splashed water drop or the washing cap bounced out will cause body injury or damage of the washing machine. 以免水滴飛濺或洗衣蓋飛出造成人身傷害或洗衣機損壞。



 When keeping the washing cap, please prevent it from deforming. 保管洗衣蓋時,請注意防止其變形。

 The washing cap is a consumable good. Purchases can be made at authorized dealers. Refer page 48 for the optional parts. 洗衣蓋屬於消耗品,若有損壞請到指定的商鋪購買。另售部品 48

Installation of the washing cap

洗衣蓋的安裝方法

 
1 Bend the cap as is shown in the figure and then put it in the basket with the side with letter faced up.

洗衣蓋內有文字一面朝上,如圖所示將其彎曲並先放 入洗衣槽內側。



- 2 ①Press the washing cap on your side, squeeze the whole cap into the basket. 壓下身旁的洗衣蓋,將洗衣蓋整個壓入洗衣槽內。
 - ②Press hard the whole washing cap down and flatten it up.

用力將洗衣蓋整個向下壓,擺放平整。



Attention 注意

 Please install the washing cap in right way to avoid unnecessary injury. 請正確安裝洗衣蓋,避免造成不必要的傷害。

Taking out the washing cap

洗衣蓋的取出方法

Push the washing cap down.

將洗衣蓋向下壓。



2 As shown in the figure hold on to the center part and bend it to the arrow direction.
如圖抓住中圈,將洗衣蓋向箭咀方向彎曲。



Pull the washing cap out. 然後順勢將洗衣蓋拉起,取出。



Adjustment of the position and height of the washing cap

調整洗衣蓋的位置高度

 
In "Wool" program 『毛絨』程序時

The installation position (height) of the basket shall be determined by the type, size, and thickness of the
washings. Please install the washing cap at a height where it could press against the washings slightly.
洗衣蓋的安裝位置 (高度)應根據衣物的種類、大小、厚度而定,請將洗衣蓋安裝在可輕壓住衣物的高度。



 There is a sign of protrusion on the interior wall of the basket, indicating where the installation position shall be, which can be used as reference at the time of installation. 洗衣槽內壁上有表示安裝位置的突起標誌,安裝時可供參考。

For light and thin clothes such as blouse, towels can be put into the basket to adjust the height of the washings and avoid oblique of the washing.
 洗滌罩衫等輕薄衣物時,可在洗衣槽內放入毛巾等物,以調節衣物高度,避免脫水時衣物偏斜。




Washing waterline 洗衣水位	washing capacity 可洗衣量
35L∼ 25L	less than 1.2kg 在1.2kg以下

Attention 注意

 Do not add any clothes on the washing cap after the installation of the cap. 洗衣蓋安裝完畢後,請不要在洗衣蓋上再 加入衣物。


In "Blanket" program 『被毯』程序時

 - 1 Dismantlement of the detergent dispenser 洗衣粉加入盤的拆卸方法
 - ①Bend the dispenser 彎折加入盤。
 - ②Dismantle the pin from the pinhole. 將銷釘從銷孔中卸下來。



- 2 Put the washing cap into the basket, hold the central circle, and pull it right beneath the balance ring. 把洗衣蓋放入洗衣槽內,握住中圈將其拉到平衡環正下方。

  Do not clip the clothes when installing the washing cap.
 安裝洗衣蓋時,請勿夾住衣物。






Preparing for Air Jet

開始風乾前

- Air Jet function helps to shorten the time for laundry airing by using of strong wind and high-speed spinning.
 It prevents shrinkage and transfrigure that caused by heating.
 - 風乾功能是利用強風和高速脫水,縮短衣物晾乾時間,可免除傳統熱烘式乾衣引致縮水變形的問題。
 - May be used to dry the heat-irresistible swimsuit or the underwear containing the amino heat-insulation materials.
 可對不耐熱的泳衣或含隔熱材料的內衣進行風乾。
 - Keep room free of mugginess for causing no temperature rise. 由於溫度不上升房間不會悶熱。
- Provide the same drying effect as the airing in the room.
 - 可以達到和房間內晾乾同等的乾燥效果。

 Maximum 2kg of blending chemical fiber can be dried in 3 hours.
 可在 3 小時內風乾 2kg 化學纖維混紡等衣物。
- Be able to control the black mildew in the washing basket. (The program of "Tub Dry" that only dries the washing basket may be applied to prevent the mildew.) → 38
 可抑制洗衣槽中的黑色霉菌。(可利用僅風乾洗衣槽的『筒風乾』程序來防止霉菌) → 38
- The drying capacity can be as high as 2kg. (Blending chemical fiber)

 衣物最大風乾量爲 2kg。(化學纖維混紡)



About 2kg of laundries 約2kg洗衣量

Hair above the filter net (Well rearrange the post-spinning wet laundries and put them into the washing basket) 棉絮過濾器之上(將已脫水濕 衣理順後並放入洗衣槽內)

■ Laundries not applicable to air jet dry 不適宜風乾的衣物

- Comforter and blanket 被子、毛毯
- Shoes 鞋子
- Laundries inclined to decolor 易脫色衣物
- Laundries with the label for washing 洗衣標籤中有 標誌的衣物
- Laundries inclined to be reshaped 容易變形的衣物

Excessive use of detergent may cause insufficient air jet dry or unexpected corrugations. 洗衣量過多時會造成風乾不充分或出現較多皺紋。

Please never handle the waterproof paper or laundries with air jet mode. 請勿風乾具防水性的紙張或衣物。

Attention 注意

• Please well rearrange the laundries before putting them into the washing basket.

請務必將衣物理順後再放入洗衣槽內。

Excessive or poorly-rearranged laundries may cause operation failure.

放入衣物過多或衣物尚未理順時,可能會出現錯誤。

- The laundries with lining should be set with enough air-dry duration.
 - 應對有襯裡的衣物設定較長的風乾時間。
- If the blending product includes a big portion of cotton, reduce the amount of laundry in one round of air-dry process or set longer airdry duration. 混紡製品中棉的比重較多時,應減少一次風乾中衣物的量或設定
- 混紡製品中棉的比重較多時,應減少一次風乾中衣物的量或設定 較長的風乾時間。
- In the sensitive case of dust or pollen, please close the doors and windows before starting operation.
- 對灰塵或花粉較爲敏感時,請將門窗關閉後再進行運轉。
- The duration is irrelevant to the air jet level for applying the preset mode. The amount and type of laundries, the temperature and humidity, the season, or the installation environment may cause insufficient air jet. Go on with the air jet process in case of insufficient drying.

因採用定時風乾方式,所以風乾結束時間與風乾程度無關 衣物的量和種類、氣溫濕度、季節、安裝環境等因素也可 能造成風乾不充分的現象。

若出現風乾不充分,請繼續進行風乾。

Air Jet Process 風乾方法



Take out the laundries after washing process, rearrange them evenly and put them into the washing basket.

洗衣結束後,取出衣物,理順後將其平整放入洗衣槽。

• The air jet capacity can be as high as 2kg. 最大風乾量爲 2kg 。



Press the "Power Switch" button ①. 按下電源開關按鈕 ①。



Press the "Air Jet" button to set the air jet duration.

按下『風乾』按鈕 3 , 設定風乾時間。



Press the "Start/Pause" button (The sound of buzzer indicates washing completion.)

按下『啟動/暫停』按鈕

(蜂鳴聲響起表示洗衣完畢。)




- Please prevent the washing machine from shakingwhen taking out the laundries. (Water may flow out from the injection opening.) 取出衣物時,請勿使洗衣機搖晃。 (水可能會從注入口處流出。)
- The preset during is only for air-jet process, and the actual operation duration is 5 to 30 minutes longer for including the duration of rearrangement and even


設定時間僅是風乾的時間,實際運轉時間還要加上理順衣物和調整衣物平衡的時間,大概要增加5至30分鐘。(根據設定時間的變化而改變)。

regulation of the laundries. (Depending on the preset

Recommended Operation Time 建議使用時間表

■ The following information is for reference only. Air Jet Drying is only an supporting feature, helps shorten the time for laundry airing, but it cannot dry your laundries completely. 以下資料只供參考,由於風乾功能僅屬輔助性質,幫助縮短晾曬衣物的時間,但不能將衣物完全乾透,衣物仍須晾乾。

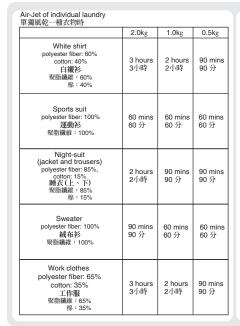


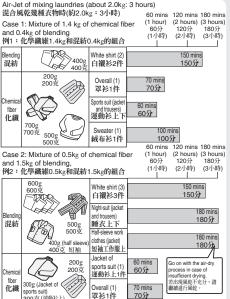



Wash in Your Favorite Way

按照您喜歡的方式進行洗衣

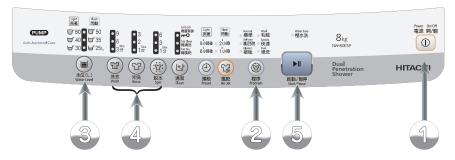

■ Any of the programs of "Washing", "Rinsing" and "Spinning" can be set up alone, and the programs can also operate in combination. (The content of the washing will not be stored) 可以單獨設定洗衣、沖洗、脫水任何一個程序,亦可將各個程序組合運轉。(洗衣內容將不會被儲存)

Attention 注意

 Except the "washing → rinsing → spinning" and "washing → spinning", when other washing modes are set, no stirring of the washings will be made for loosening clothes after the completion of drainage. 除 "洗衣→冲洗→脱水"及 "洗衣→脱水" 設定外,設定其他洗衣方式時,最後排水結束後不會爲疏鬆衣物而進行免纏結攪拌

In the following cases 在下列情況下









Set washing modes by pressing the buttons 通過各按鈕設定洗衣 方式

Wash in the favorite way 按自己喜歡的方式洗衣時 Washing→Rinsing→Spinning 洗衣→沖洗→脱水

> Use the detergent again 再次使用洗衣液時 Washing only 單洗

No need spinning after rinsing 漂水結束後無需脫水時 Washing→Rinsing 洗衣→沖洗

To rinse the washed laundry 希望將已洗過的衣物沖洗時 Rinsing only 只沖洗

To rinse and spin the washed laundry 希望將已洗過的衣物沖洗並脫水時 Rinsing→Spinning 沖洗→脫水

To drain the water out of the washing basket or to spin before drying 希望排出洗衣槽內的水或在晾乾前脫水 Draining only, spinning only 只排水, 只脱水



Power

電源

(L)

Press the

power button

按下電源開關



(D)

Select the

"Normal" program

選擇"標準"程序





Select the water level 選擇水位

The sensor will fix the water level automatically in the case of no set to water level. 沒有設定水位時, 由傳感器自動決定 水位多少。







After draining

後,開始 備沖洗





選擇水位 Automatically set to "60L" in the case of no set to water level. 沒有設定水位時,自動設 定爲「60L」。 ※ NW-70ES, NW-70ESP is automatically

set to"59L". ※NW-70ES, NW-70ESP自動設定爲「59L」



Atter draining and spinning, it begins to add water for rinsing. 排水和脱水結束 後,開始供水準 備沖洗。



Select spinning "1 min." when draining only. 只排水時,請選擇脫水"1分 鐘"進行運轉。

36

How to use the "Water Level" button 水位按鈕的使用

With each pressing on the "Water Level" button,the indicator will move towards the arrow 每按一次水位按鈕,指示燈會沿著箭 明方向移動。

*NW-80ESP NW-80ES

*NW-70ESP NW-70ES 59L

60L 50L 40L

50L LED flashes 指示燈閃動 40L

35L 30L 25L 35L LED flashes 指示燈閃動 30L

LED flashes 指示燈閃動

Tips 簡要說明

When adding water during washing or rinsing process, press and hold the "Water Level" button for continuous injection of water.

(When the top water level is reached, no more water is able to

be charged.) 洗衣或沖洗過程中要加水時按下水位 按鈕,持續按住即可加水。

(到達最高水位後,將無法再度加水) Only "25L" "30L" "35L" setting can be made in "Speedy", "Wool" proceses. 『快速』『毛絨』儘設定25L、30L、35L。

How to use the "Wash" button 洗衣按鈕的使用

With each pressing on the "Wash" button, the indicator will move towards the arrow 每按一次洗衣按鈕,指示燈會沿著箭 明方向移動。

15分 (9 minutes and 6 minutes LED light) (9分、6分指示燈點亮) 12分 (9 minutes and 3 minutes LED light) (9分、3分指示燈點亮)

9分 (9 minutes LED light) (9分指示燈點亮)

6分 (6 minutes LED light) (6分指示燈點亮) 3分 (3 minutes LED light) (3分指示燈點亮)

LED extinguishes (no washing) 指示燈熄滅 (不洗衣)

Tips 簡要說明

Manual setting can't be made in "Soak", "Wool" and "Blanket" processes. 在『浸洗』『毛絨』和『被毯』程序中 不能進行手動設定。

How to use the "Rinse" button 沖洗按鈕的使用

With each pressing on the "Rinse" with each plessing of the finise button, the indicator will move towards the arrow. 每按一次沖洗按鈕,指示燈會沿著箭咀方向移動。

* NW-80ESP, NW-70ESP

3次 2次 1次

(儲水沖洗3次) 2 times of rinse with sto (儲水沖洗2次) 1 times of rinse with storaged water (儲水沖洗1次)

(no rinsing) (不沖洗)

* NW-80ES. NW-70ES

2次+1次+注水 3 times of rinse wit (注水沖洗3次)

2次+1次 2次+注水 3 times of rinse with storaged water (儲水沖洗3次) 2 times of rinse with in (注水沖洗2次)

2次

2 times of rinse with storaged water (儲水沖洗2次) 1 times of rinse with injection water (注水沖洗1次)

1次+注水 1次

1 times of rinse with storaged water (儲水沖洗1次)

LED extinguishes 指示燈熄滅

(no rinsing) (不沖洗) Tips 簡要說明

*Manual setting can't be made in "Wool", "Blanket" processes. 在『毛絨』『被毯』程序中不能進行 手動設定。

How to use the "Spin" button 脱水按鈕的使用

With each pressing on the "Spin" button, the indicator will move towards the arrow. 每按一次脱水按鈕,指示燈會沿著箭 咀方向移動。

9分 (6 minutes and 3 minutes LED light) (6分、3分指示燈點亮)

6分 (6 minutes LED light) (6分指示燈點亮)

3分 (3 minutes LED light) (3分指示燈點亮) 1分 (1 minute LED light) (1分指示燈點亮)

LED extinguishes 指示燈熄滅 (不脫水)

Tips 簡要說明

Manual setting can't be made in "Wool" processes. 在『毛絨』程序中不能進行手動設定。





End The buzzer sounds when the program ends. 結束 蜂鳴聲響起表示洗衣結束











Operation stops if the rinse solution remains. 仍有沖洗液時停止運轉。

Operation stops if the detergent remains. 仍有洗衣液時停止運轉。









Tub Clean Program (Regular maintenance)

筒清洗程序 (定期保養)

It's hard for the soap alkali residue and the mildew to adhere to the stainless steel basket, but the soap alkali residue may come into being after long usage.

Please perform the regular maintenance, and clean the washing basket bimonthly.

雖然肥皀鹼垢和霉菌很難附在不銹鋼槽內,但長時間使用後,有可能形成肥皀鹼垢。

請定期進行保養,大約2個月對洗衣槽進行一次清洗。



Press the "Power On/Off" button . 按下電源開關按鈕 ①。



Press the "Clean" button (), select the "Tub Clean" program.

按下『 清潔』 按鈕 😉),選擇『筒清洗』程序。

· With each pressing on the "Program" button, the indicator will light in sequence. 每按動一次『程序』按鈕,各指示燈會順次點亮。



Press the "Start/Pause" button

按下『啟動』按鈕

- Final spinning is made after washing (stirring, stop) 120 mins and water storage rinse 2 times. 經過洗衣(攪拌、停頓)120分鐘和2次儲水 沖洗,最後進行脫水。
- · Please do not use regular detergent, for it will not be able to clean the basket. 請勿使用日常使用的洗衣粉,因爲不能達到清 洗槽的目的。
- Please do not put clothes in the basket. 請勿在洗衣槽內放入衣物。 "Water Level", "Wash", "Rinse", "Spin" can not be choosen.

『水位』、『洗衣』、『沖洗』、『脫水』均 無法選擇。

- ★ Pour in detergent and close the lid. (The sound of buzzer indicates washing completion) 放入清洗劑,關閉機蓋。(蜂鳴聲響起表示洗衣完畢)
 - The detergent is the oxidizing bleacher sell in the city. Please infuse 250g (about one bottle) bleacher. 清洗劑爲市面有售的氧化型漂白劑,請在洗衣槽



Tub Clean process is completed. 『筒清洗』程序完畢

內倒入 250g(約1瓶)漂白劑。

※ Final spinning operates for about 20 minutes, can dry the basket and prevent the black mildew from being generated. 最後的脫水約運轉 20 分鐘,可對槽內進行乾 燥,從而抑制黑色霉菌的產生。

Tub Dry Program 筒風乾程序



Press the **Power On/Off** button .

按下『電源』按鈕□。

 Please do not put in clothes. 請不要放入衣物。



Press the **Clean** button (**b**), select **Tub** Dry .

按下『清潔』按鈕(😉),選擇『簡風乾』。



Press the 『Start/Pause』 button 🗾 .



按下『啟動』按鈕 💾 。

*Drying and spinning is about 30 minutes. 風乾脫水約30分。

Water Level", "Wash", "Rinse", "Spin" cannot be choosen.

『水位』、『洗衣』、『沖洗』、『脫水』均 無法選擇。

(The sound of buzzer indicates the washing completes) (蜂鳴聲響起表示洗衣完畢)



Maintenance and Repair

維護保養方法

Pay attention to the rust on the washing tub

注意洗衣槽內的銹跡

The stainless basket is rustproof, but it may rust in the following cases. 雖然不銹鋼槽具有難以生銹的性質,但在以下場合還是有可能會生銹。

- ① The rust-inclined ironwork such as the barrette or the needle remains in the basket and touches the stainless steel inner wall. 髮夾或針等容易生銹的鐵製品留在槽內,與不銹鋼內壁接觸時。
- ② The water containing the impurities such as rust or iron power flows into the washing basket, and the impurities adhere to the stainless steel inner wall.

混有紅銹或鐵粉等雜質的水流進洗衣槽內,從而附著在不銹鋼內壁上。

When rusting of the basket occurs, use a sponge socked with liquid cleanser to remove the rust.

(See instruction label on liquid cleanser for details)

對於鐵銹,可用市面有售的乳狀清潔劑倒在海綿或布上,反復擦拭將其清除。

(詳細內容請參閱洗衣粉的使用說明)

• Please do not use metal brush to clean the washing basket lest it will damage or rust the washing basket. 請勿使用金屬剛清洗洗衣槽,以免損傷洗衣槽或使之生銹。

To avoid rust, the followings must be ensured.

爲防止生銹,必須注意以下要點

Avoid water and chlorine bleach in the basket for too long.
 嚴禁水或氯類漂白劑長時間停留在洗衣槽內。



Maintenance of the lint filter. (It shall be performed after each time of use)

棉絮過濾器的保養 (每次使用後都必須進行)

Lint Filter 棉屑過濾器



Remove the Lint Filter 取出棉絮過濾器的方法

- Put your hand into the groove, press down the buckle on the top with your finger. 將手伸入凹槽處,用手指按住上部的搭扣。
- Pull and remove it. 將其向外拉出取下。

 


Open the filter 打開過濾器











搭扣 (On the top)

Groove

 
凹槽 Lint Filter

●When the filter cover comes off, align the filter cartridge with the corner hole of the filter cover and vertically buckle it. 渦邊器蓋散落時,將渦邊盒對進渦邊器蓋的角孔,垂直對進扣入。



Close the cover and install the lint filter to reset it. 關閉蓋,安裝棉絮過濾器復位。

- 11 Tuck the buckle (at the bottom) of the lint filter. 將棉絮過濾器的搭扣(下部)塞入
- 2 Press the cover until the buckle on the top of the filter clicks. 將外殼壓入,直至聽到過濾器上部的搭扣發出"卡嚓"的聲音。



Notes 備注

The lint filter is consumable item. When damage is found in the filter net, please buy a new one at a dealer.
 棉架過濾器屬於消耗品。網袋破損時,請往指定商鋪購買。

Attention 注意

- When the lint filter is fetched out, please do not let the coin or barrette fall in the bottom of the washing basket.
 取出棉絮過濾器時,請勿讓髮夾或硬幣等物掉入洗衣槽底部。
- Please do not wash clothes after removing the lint filter lest it will damage the clothes. 請勿將在棉絮過濾器拆下時洗滌衣物,以免損傷衣物。
- If lint filter is wrongly installed, the clothes or filter may be damaged during washing.
 若不正確安裝棉架過濾器,則洗衣時可能會損傷衣物或損壞過濾器。



Maintenance and Repair (continued)

Turn off

關閉

維護保養方法 (續)

How to keep the product from freezing 有可能結冰時

1 Turn off the tap. 打開水龍頭。

2 Press the Power On/Off button to turn on the power. 按下 [電源 開 / 關] 打開電源。

3 Select the "Tub Clean" program and press Start. 選擇[筒清洗]程序,按下[起動]。

4 Remove the water supply hose and turn it downward. (Place a shallow container or a piece of cloth under the hose as water remained in the hose may be drained.) 宣 14 取下供水管使其朝下。 供水管

(在供水管下方放置一個容器或一些衣物以觅殘留在供水管中的水流出) **2** 14

5 After approx. 30 seconds, press Pause to stop the operation. (Water remained in water supply hose drains out.) 大約 30 秒後按下[暫停]停止運轉。 (殘留在供水管中的水排出)

6 Place the drain hose to the drain outlet. 將排水管放入排水口中。

8 Press the Power On/Off button to turn off the power. 按下 [電源 開 / 關] 關閉電源。

How to handle freezing 如果已經結冰時

1 Disassemble the water supply hose, and put it into the warm water as hot as 40°C. 卸下供水管,將其放入 40 度左右的溫水中。

2 Pour the warm water as hot as 40°C into the basket. 在槽內倒入 40 度左右的溫水。



3 Connect the water supply hose to the tap, and check the washing machine to make sure the water supply and drain are in normal case.
再將供水管接至水龍頭,檢查洗衣機是否正常進行供水、排水動

 
How to maintain the water inlet 供水口的保養

The contamination accumulated at the water inlet will worsen the supply effect. 供水口積有髒物會影響供水效果。

Turn off the tap, and remove the water supply hose. (Refer to page 13 for proper disassembly) 關閉水龍頭,卸下供水管。

(拆卸方法 ② 13)

- **2** Clean up the contamination accumulated at the filtering net of water inlet. 清除供水口濾網處積留的污物。
 - If it's hard to clean up the contamination, disassemble the filtering net for east cleanout. 若污物不易清除時,可將濾網拆下以便清洗。



Attention 注意

 The filtering net of water supply opening shall be recovered to the original shape after cleanout, so as to avoid the failure of water supply valve.

供水口濾網清洗後,請務必恢復原狀,以免引起供水閥的故障。

⚠ Warning 警告



 If there is residue air in the water supply hose and water drainage hose, the washing machine could be damaged by compressed air, leading to leakage or injury accident.

供水管、水管中有殘留空氣,洗衣機有可能因壓縮空氣而受損,從而造成漏水或傷害事故。

Maintenance of the detergent dispenser 洗衣粉加入盤的保養

 
Remove the detergent dispenser for maintenance.

(It is liable to damage during dismantlement, please pay attention to it during the operation) 👉 22 拆下洗衣粉加入盤進行保養。

(拆下時易損壞,操作時請加以注意) 22

- If there is detergent or softener residue, please wipe it off or flush it away with water.
 有洗衣粉或柔軟劑等物殘留時,請擦拭乾淨並用水沖洗。
- If there is severe dirt, warm water of around 40°C can be used to immerse it for five minutes, and then use the tools such as toothbrush to clean it up. 有嚴重污垢時,可用 40 度左右的溫水浸泡 5 分鐘,然後用牙刷
- 等工具清洗乾淨。
 Before installing the detergent dispenser, please wipe off the water attached on it.

安裝洗衣粉加入盤前,請擦乾上面附著的水分。



Detergent dispenser 洗衣粉加入盤

Maintenance to the main unit 機體的保養

Please use the soft cloth to wipe and clean the dirt on the washing machine body and the control panel. 請用軟布將機體和控制面板上的污垢擦拭乾淨。

⚠ Warning 警告



During the course of maintenance and repair, don't spray water directly to any part of the washing machine body.

進行保養時,請勿直接將水淋灑在洗衣機的各個部位。

To avoid the happening of short circuit or electric shock.
 以免造成矩路或觸電。

Attention 注意

 Please don't use gasoline, thinner, detergent,alkali or weak-alkali detergent and wax to wipe the washing machine body, and please don't use brusher to wipe the body either.

請勿用汽油、稀釋劑、清潔劑、鹼性 或弱鹼性洗衣劑以及蠟等物質擦拭機 體,也請勿用刷子來擦洗機身。



- When using the chemical duster cloth, please refer to its user manual. 使用化學抹布時請遵照其使用說明。
- Remove any detergent touching the lid or other plastic components, otherwise it will damage the washing machine body after long remaining.

清潔劑沾至機蓋等塑料部件時,應立即擦除,否則長時間會損傷機身。



Troubleshooting

有故障發生時

About the abnormality alarm

關於異常警報

In the following cases, the flash of indicator and the sound of buzzer will announce the abnormality.

If the washing machine generates unexpected error alarm, the washing machine shall be temporarily suspended for a while, and then restarted. If the same error alarm occurs again, please follow the following steps. 出現下列情況時,將通過指示燈的閃動和蜂鳴器聲響告知您發生異常。

但若洗衣機出現意外的錯誤警報時,應先暫停機器,然後再次啟動。

若再次出現同樣的錯誤警報,請按以下步驟進行檢查。

Flash of indicator

Alarm content 警報內容

Part to check 檢查部位

Solution 處理方法





Fail to reach the full water level within 40 minutes or fail to reach the required level (10L) within 8 minutes 經過 40 分鐘還無法達至滿水 位,或經過8分鐘還沒有達到 規定水位 (10L) 時



- . Is the tap water pipe frozen or out of supply?
- 自來水管是否凍結或停水?
- Is the filtering net at the water supply opening blocked by contamination? 供水口濾網是否被污物堵塞?
- NW-80ESP, NW-70ESP whether or not hang the drain hose?

 




NW-80ESP, NW-70ESP 的排水管是 否掛起?



Check the water drainage hose



請對排水管進行檢查

- Is the water drainage hose or water drainage pump blocked by silt or lint? (Drainage opening need to be checked also) 排水管或排水是否被泥沙或棉絮堵塞?
- (排水口也需檢查) . Is the water drainage hose frozen? 排水管是否有凍結?
- Is the water drainage hose properly installed? P.10~11 頁 是否正確安裝了排水管 ? P.10~11 頁
- ※ (NW-80ES, NW-70ES) Is the water drainage hose laid down? 排水管是否被放下?
- Is the water drainage hose squeezed up? 排水管是否被壓扁?
- Is the hanging height of the water drainage hose more than 1m?
- immersed in the water and blocked?















 
NW-80CS/NW-70CS

Fail to drain water 無法排水時

Fail to drain up water within 5 minutes 經過5分鐘還無法排水完畢

排水管掛靠高度是否超過1米?

. Is the U-shaped hose on the tail 排水管尾部 U 型管是否浸沒於水中而被 堵塞?



Stop during the spinning course 脫水過程中停止

. Is the laundry laid aside? 衣物是否偏置於一側?

Please press the "Start/Pause" button to pause the operation, rearrange the laundry evenly, and restart with the lid closed. 請按下暫停按鈕暫停運 轉,調整衣物平衡後, 關閉機蓋重新啟動

Flash of indicator 指示燈閃動

Alarm content 警報內容 Part to check 檢查部位 Solution 處理方法

Fail to work 無法運轉

Is the lid closed?
 機蓋是否已關閉?

Close the lid. 關閉機蓋。

The lid is not locked completely
(The lid is not completely closed)
機蓋沒有完全鎖緊
(機蓋沒有完全關閉時)

 Is there foreign substance under the lid? 機蓋下有異物? Troubleshooting 排除異常

Restart operation 再次啟動運轉



Lock of lid cannot be unlocked 機蓋鎖緊無法解除

 Press "Pause" button, and then restart it. 按下暫停按鈕,然後重新啟動。 If there is still trouble, stop using the unit and request repair. 若仍出錯,請停止使用並請專人修理

• If the above abnormal alarms occur, they may be caused by outside interference.

At that time, please press the Pause button to suspend the washing machine, then restart it. If the same alarms occur, please stop the use and request repair.

若出現上述之外的異常警報,有可能是由外來干擾導致。

此時請按下暫停按鈕暫停運轉,然後重新啟動,若仍出現相同的異常警報,請停止使用並請專人修理。

Before the repair request 要求修理前

Please recheck the following items

請再次檢查以下項目

Case 現象

Fail to running 不運轉

Cause 原因

- Is power cut? 是否停電?
- Does fuse or breaker blow? 保險絲或熔斷器是否燒斷?
- Can the power plug enter the socket properly? 電源插頭是否可靠地插入電源插座?
- Is the power switch on? 電源開關是否打開?
- Is the tap turned on? 水龍頭是否打開?
- Whether the "Start" button is pressed or not? 是否按下『啟動』按鈕?



Troubleshooting (continued)

有故障發生時(續)

Case 現象

Fail to supply water 不供水

No spinning, washing basket can't rotate 不脫水、洗衣槽無法旋轉 No stirring 不攪拌

Unable to air jet 無法風乾

It doesn't work after setting of air jet 設定風乾後無法工作

Cannot open the lid 機蓋打不開

Abnormal sound occurs 發出異常聲音

No buzz at the end of washing 洗衣結束後無蜂鳴聲

The lid can't be opened during the operation.

運轉過程中,機蓋無法打開

Water leakage 漏水

Cause 原因

Please refer to "Part to check" in "About abnormality alarm". 🕝 42 請參照"關於異常警報"中的『檢查部位』。 😭 42

- Please refer to "The Approximate air-jet duration of laundry". (字 35 請參照 "衣物的大致風乾時間"。 (字 35
- If there is water remained in the spinning basket, Start button can not be pressed. And it can only be pressed after draining all of the water.
 股水槽中有水積存時,就不能接受『啟動』鍵,要先推行排水,把水

脫水槽中有水積存時,就不能接受『啟動』鍵,要先進行排水,把水 排光後再按『啟動』。

 If there is outage and shutdown during the operation, the washing machine will generate alarms and cut off the power supply. The lid is still locked. When power supply is switched on again, the lid lock will be unlocked. 電源開闢是否打開?

(運轉過程中出現斷電或停電時,洗衣機將發出異常警報並自動切斷電源,機蓋仍處於鎖定狀態。再次接通電源後,機蓋鎖定將解除。)

- Is the washing machine declining or shaky? (字 8 Installation Guide 洗衣機是否有傾斜或搖晃? (字 8 安裝指南
- Is any barrette or metal item mixed in the washing basket? 有無髮夾或金屬物體混入洗衣槽內?
- The washing machine has been set the safety protection mode during the operation. If opening the lid, please press the "Start/ Pause" button. ② 20

 本機在運轉過程中就已經設定了安全保護模式,如要打開機蓋請按 "啟動/暫停" 键。 ② 20
- Is the tap of proper shape? ② 13 水龍頭的形狀是否合適? ② 13
- Is the water drainage hose inserted into the water drainage joint properly? Is the hose clipper well positioned? ② 10~11 排水管是否切實地插入排水接頭?軟管夾子是否夾到位? ② 10~11
- Except the failures metioned above, the lid lock protector may cause cases such as stop during operation or lid
 unable to be opened. In such case, please unplug the power supply unit. Plug it back after 5 minutes, and then
 reset operation.

除了上述故障外,如發生運行中途停止或機蓋無法打開的現象,是機蓋緊鎖開關保護器動作。此時,請拔下電源插頭,五 分鐘後再插上,重新設定並運行即可。

* NW-80ESP / NW-70ESP

 If all indicators turn off during operation but only the water drainage pump remains in operation, this is the auto operation of protection circuit in washing machine. This is not an error.

After water drainage pump stops, please reconnect the power supply and reassign the setting. 如果所有指示燈在運轉過程中熄滅,但只有排水泵仍在運轉,這是因爲洗衣機中保護電路在自動運行。這並非故障。排水泵停止運轉後,請重新連接電源並進行設置。

Automatic power Off

電源自動關閉功能

- The power will be cut automatically at the end of operation. 運轉結束後,電源開關將自動切斷。
- The power will be automatically cut if the washing machine keeps one of the following status for above 1 hour. 在下列情况中,若將洗衣機放置 1 小時以上,則電源開關將自動切斷。
 - 1) Pause 暫停狀態
- 2) Lid open 機蓋開啟的狀態
- 3) Abnormality alarm describes in page 42 如同 42 頁的異常警報狀態
- With no pressing on "Start/Pause" button in 5 minutes after the power on, the power will be cut automatically. 接通電源後,若不按下啟動按鈕,則 5 分鐘之後電源開闢將自動切斷。

The following cases are not the failures

以下現象並非故障

關於聲音

聲音。

Case	現象
	フレタバ

	Supply water during the course of washing. 洗衣過程中供水。	• !
	The water cannot be charged when starting washing from rinse. 從沖洗開始洗衣時,無法供水。	• 1
About the water charging 關於供水	After connecting the water supply pipe, water will come in from the water supply opening if turning on the tap. 供水管連接後,打開水龍頭,有水從供水口處流出。	• 1
	The pulsator stop rotating during the charging for about 1 minute. 供水過程中攪拌翼停止旋轉,供水停 止約1分鐘。	• 1
	The rotary water supply takes a longer time. 旋轉供水時間變長。	• į
	"Rustle" happens as rotating the washing basket by hand. 用手轉動洗衣槽,發出"沙沙"聲音。	·
About the sound	It sounds "Karcha" at the beginning of washing or spinning. 洗衣或脱水開始時發出 "卡嚓" 聲音。	· ·

It buzzes during the operation. 運轉過程中發出"嗡-"或"嗡嗡"

It buzzes or sounds "Hoola,

washing or dehydration.

hoola" during the high-speed

高速洗衣或脫水過程中發出"嗡 – 或"嘩啦嘩啦"聲音。

Cause 原因

 Supply water automatically if the water level drops during the course of washing.

洗衣過程中若水位下降,便會自動補水。

- The rinse water can only be charged after drainage and spinning.
 排水和脱水之後才開始進沖洗用水。
- With the application of decompression valve, the close of valve needs certain duration.
 由於採用了減壓閥,閥門關閉需要一定的時間。
- It may be influenced by outside interference, and it takes some time for the sensor to detect the interference.

可能受到了外來干擾的影響,而傳感器檢測干擾需要一定時間。

- As the water level of washing machine is too low. 這是由於洗衣機的供水量太小所引起的。
- The sound comes from the water flow in the liquid balance used to relieve the spinning vibration.
 這是降低脫水振動的液體平衡器中水流的聲音。
- That is generated during the mode switch of the clutch (the strength of the sound varies with the sound duration).
 這是離合器進行模式切換時的聲音。
 (聲音大小隨發生時間而變化)
- That is the electromagnetic sound of the motor switched on and off.
 這是電機通斷電或電閘的電磁音。
- That is the electromagnetic sound of the motor switched on and off to control the rotating speed.
 這是爲了控制脫水轉速而給電機通斷電所發出的聲音。



Troubleshooting (continued)

有故障發生時(續)

Case 現象

Supply water during the course of spinning. 脫水過程中供水。

Supply water and start rinsing during the course of spinning. 脫水過程中開始供水並沖洗。

About the spinning 關於脫水

Spin intermittently after start spinning.

脫水開始後,間歇性地脫水。

The lid can't be opened even when the Pause button is pressed during the spinning. 脱水過程中,即使按下暫停按鈕也無法立即打開機蓋。

The power supply switch won't work right away even when the On/Off button is pressed during the spinning.
脱水過程中即使按下電源開關按鈕,

脱小週程中即使按下电源開關電源開闢也不會立即起作用。

※NW-80ESP/ During the period of water drai

**NW-80ESP/ NW-70ESP About the water drainage pump 關於

排水泵

During the period of water drainage, the water drainage pump start to work, and there is water drained out from the water drainage hose. 供水過程中,排水泵開始工作,排水管中有水排出。

It sounds like asthma when the water drainage pump start to work. 排水泵排水時,有類似哮喘的聲音。

About the water level 關於水位

Relatively low water level compared with the washings load.

水位相對於洗衣量較低。

Relatively high water level compared with the washings load. 水位相對於洗衣量較高。

About the lint filter 關於棉絮 過濾器

There are much floss. 棉絮較多時。

About the washing duration 關於洗衣時間

Washing doesn't finish beyond the predefined time. 超過設定時間洗衣仍未結束。

Cause 原因

- The security switch acts as the laundry declines. Change automatically to the "Water-storage rinse" for the next rinsing. 由於衣物偏斜導致安全開闢動作的緣故。 下次沖洗將自動變爲儲水沖洗。
- The security switch acts as the laundry declines.
 Start spinning and agitating after rinsing, and the spinning will go on after clearing the laundry declination.
 由於衣物編科導致安全開闢動作的緣故。
 沖洗後進行脫水和攪拌運轉,消除衣物編科後還會繼續脫水。
- It is because the sensor control the spinning times to improve the efficiency of spinning.
 這是為提高脫水效率,由於傳感器控制脫水次數的緣故。
- When the power supply is cut off, the basket stops completely, and the lid lock will be unlocked.
 當斷開電源,脫水槽完全停止下來後,機蓋銷定將被解除。
- The power supply switch won't work until the basket stops the inertial rotation.

直到脫水槽的慣性旋轉停止後,電源開關才會起作用。

 This is to prevent overflow.
 The water drainage pump starts automatically when the preset alarming level is exceeded.
 這是爲了防止溢水。

當超過設定的預警水位時,排水泵自動啟動。

 This is because the water in the washer is going to to be drained off, resulting in the entry of air into the chamber of the water drainage pump.

這是因爲洗衣機中的水即將排完,使空氣進入了排水泵的腔體內。

- The setting of the water level is based on the extent of the washings in the washing machine emerging out the water surface and the ability of the clothes roll up and down in the washing machine. 洗衣機以衣物稍微露出水面及由攪拌翼攪拌衣物可以上下翻動的能力爲依據設定水位。
- Since the clothes of chemical fiber is comparatively light, the water level is set accordingly low.

由於化學纖維、聚脂纖維等衣物較輕,因此水位設定也較低。

- The water level will rise during washing if the clothes being washed have been drenched or water has been charged in advance. 洗衣已濕透的衣物或洗衣槽中事先放了水時,洗衣時水位會較高。
- If there is much floss in "Normal" program, the efficiency of the floss filtering can be improved by increasing the water consumption, extending washing time and setting rinse for more times. 標準程序中出現較多棉絮時,可用提高水位,延長洗衣時間和設定多次沖洗等方法提高過濾棉絮的效率。
- The washing time may exceed predefined time in case of extremely small amount of charged water. 供水量很少的情況下,洗衣時間有可能超過設定時間。

Case	現象

About the drying time 關於乾燥 時間

Spinning doesn't finish beyond the predefined time. 超過設定時間乾燥仍未結束。

About the air jet processing 關於風乾 程度

It is not dried. 未乾。

The power supply switch won't work right away when transferred from switched-off to switched on. 電源開闢由"斷開"轉換到"接通"

時,可能不會立即起作用。

About the power switch 關於電源

開闊

The indicating LED won't light right away when the power supply switch is switched on. 電源開闢"接通"後,指示燈不會立即點亮。

Six processes LED light after the power supply switch is switched off. 電源開闢"斷開"後,6 個程序指示燈點亮。

It buzzes after the power supply switch is switched off. 電源開闢"斷開"後,發出"嗡嗡" 的聲音。

About the lid lock 關於機蓋鎖定

The lid can't be opened even when the Pause button is pressed during the spinning.

脫水過程中,即使按下暫停按鈕也無 法立即打開機蓋。

About the flavor

Odor of insulating varnish smells in the beginning of use. 初期使用時有氣味。

flavor 關於氣味 關於氣味 脫水時有氣味。

Others 其他

Pulsator rotates but does not display the washings load and water quantity after pressing the Start button. 按下啟動按鈕後、攪拌翼轉動但沒有 顯示洗衣量和水位。

第一次使用時,有水從排水管中流出。

Water comes out from the water drainage hose during first time usage.

No reaction after starting. 啟動後無動作。

There are detergent residue remained on the detergent dispenser. 洗衣粉殘留在洗衣粉加入盤。

Cause 原因

- The predefined time is the time for drying spinning, and the actual operation time need to plus the clothes dressing and oblique correction time, which, in aggregation, will be longer than the predefined time by 5~30 minutes.
 設定時間是進行乾燥脫水的時間,實際運轉時間還要加上理順衣物和糾正衣物偏斜的時間,大概比設定時間延長5至30分鐘。
- Depending on the quantities & types of laundries, air temperature & moisture, seasons and environment, the completion time may differ.
 由衣物的數量·種類,氣溫·濕度,季節和環境決定,完成時間會變化。
- The power supply switch doesn't work from the cutoff of the switch to the extinguishment of the mode LED. If the power supply is to be switched on again, please press the switch after the LED extinguish. 從切斷電源開闢到程序指示燈熄滅爲止,電源開闢不起作用。若要再次接通電源,請待指示燈熄滅後再按下電源開闢。
- The washing machine sound "Hoola, hoola" after the power supply is switched on. About 1 second later, the LED lights. (since the software switch is used, the microcomputer need time for internal treatment.) 接通電源開闢後,於去機發出"嗶嗶"的聲音,大約1 秒鐘後指示燈點亮。 (由於使用軟件開闢,而微電腦進行內部處理需要時間)
- When switching off the power supply with clutch motor in spinning status, the clutch motor returns to washing status and the mode LED lights. 離合器電機在脱水狀態下,切斷電源開關時,離合器電機回復至洗衣 狀態,同時程序指示燈點亮。
- The operation stops after the power supply is switched off during the spinning, and it buzzes. That's the sound generated during switching modes by clutch.

 股水過程中切斷電源開關後,運轉停止並發出"嗡嗡"聲。這是離合器進行模式切換時的聲音。
- After the power supply is cut off, the spinning basket stops completely, and the lid lock will be unlocked.
 當斷開電源,脫水槽完全停止後,機蓋鎖定將被解除。
- This is the odor of the insulating varnish of the motor in the beginning of use. The odor exists only at the early stage, and will dissappear about period of time after put into application. 這是初期使用時從電機中的絕緣漆產生的氣味。該異味僅存在於初期,使用約一段時間後氣味會自動消失。
- Adverse drainage condition or excessive foams (due to excessive detergent) may cause too much spinning load and make the smell even more intensive. 排水條件惠劣或泡沫過多(因放入過多洗衣劑等)會造成脫水負荷過 大,使得氣味更加強烈。
- Water from tests conducted by the manufacturer remains in the drainage hose.
 這是工廠做性能測試時剩下的水。
- This is because the sensor cannot successfully detect due to the foreign interference. At that time, the power supply can be cut off and the washing machine need to be restarted. 這是由於外來干擾的影響而導致傳感器無法正確檢測造成的。此時可 切斷電源,然後再次啟動。
- This is because the washing machine is waiting for detergent or is switching the clutch.
 這是由於洗衣機在等待放入洗衣劑或正在進行切換離合器。
- When the body is excessive oblique, the detergent may remain on the dispenser. Please check the obliquity of the body.

 查機體過度傾斜時,洗衣粉可能會殘留在洗衣粉加入盤。請檢查機體 的傾斜程度。



- Extended water supply hose 延長用供水管 (3m)
 - For supply hose extension. 用於延長供水管。
- Washing cap 洗衣蓋
- Lint filter 棉絮過濾器



Fixing holder 排水管固定架 (NW-80ESP, NW-70ESP)



Water drainage hose 排水管 (NW-80ESP, NW-70ESP)



- Extended water drainage hose (about 80 cm) 延長用排水管 (約80 cm) (NW-80ES, NW-70ES)
 - For drainage hose extension. 用於延長排水管。

Product Specifications 產品規格

Model			
型號	NW-80ESP/NW-80ES	NW-70ESP/NW-70ES	
Туре	Fully automatic washing machine		
種類	全自動洗衣機		
Power 電源	220V∼ ; 50Hz		
Normal washing capacity 標準洗衣容量	8.0kg (the quality of dry cloth)	7.0kg	
Normal spinning capacity 標準脫水容量	(the quality of dry cloth) (乾布的質量)	(the quality of dry cloth) (乾布的質量)	
Normal water level 標準水位	60L("Normal" program) 60L(『標準』程序)	59L("Normal" program) 59L(『標準』程序)	
Rating power 額定功率	Washing: 440W; Spinning: 400W 洗衣時: 440W: 脱水時: 400W		
Washing mode 洗衣方式	Automatic reverse pulsator type 自動正反攪拌方式		
Pressure of tap water	0.03MPa~0.8MPa		
自來水水壓	(0.3kgf/cm ² ~8kgf/cm ²)		
Profile dimension 外形尺寸	NW-80ESP/NW-70ESP: W 530mm×D 600mm×H 1020mm 寬 530mm×深 600mm×高 1020mm NW-80ES/NW-70ES:		
	W 577mm×D 540mm×H 1020mm 寬 577mm×深 540mm×高 1020mm		
Weight	About 35kg		
重量	約 35kg		