
USER MANUAL

HITACHI Face Shaver BM-530

Thank you very much for purchasing this product.

Please read this user manual carefully and use the product properly.

This product is for household use only. Please do not use for other purposes.

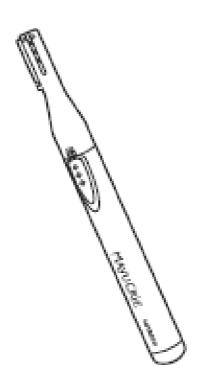



< 1. Safety Precautions >

Cautions:

- ① The product is designed specially for facial hair and eyebrows. Do not use the product to remove underarm hair or trim hair.
- ② Users, who have sensitive skin, razor rash, allergies or in areas where there are pimples or acne, should not use the product.
- ③ Do not force the blade on skin.
- ④ Check the blade for any breakage and deformation before use.
- 5 Failure to observe the following may cause injury or failure due to heat generation, electrolyte leakage or bursting of the battery:
 - · Properly use the battery according to the indication for use.
 - · Make sure to turn OFF the power switch after use.
 - · Perform periodic inspection, especially electrolyte leakage.
 - · Must remove the battery when not using the product for a long period of time.
- 6 Keep out of reach of children.
- ① Do not use the product if it has been dropped or any damage.
- Do not wash or splash water on the product.
- 9 Do not alter, disassemble or repair by unauthorized technician.

< 2. Names of parts and operation >

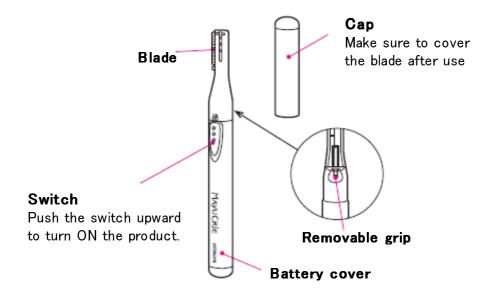


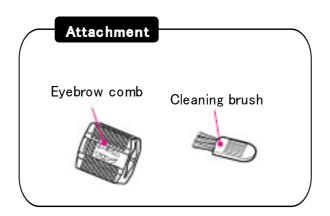


< 3. How to insert battery >

Cautions:


- ① Use an alkaline battery only (LR03/AAA). If other type of batteries are used, the product may not be performed well and cause battery life to be shorten.
- 1. Pull out the battery cover towards the direction of the arrow and remove it.

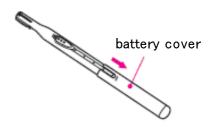

- 2. Insert the alkaline battery (LR03/AAA) into the product properly according to the battery terminal.
 - *Caution: If battery places in wrong direction, the product would not be operated.

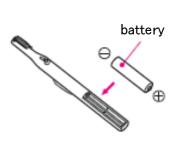

Fit the cutout part of battery cover to the switch part, and make sure the battery cover closed firmly.

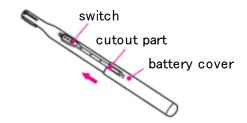

< 4. How to use >

Cautions:

- ① Check the blade for any breakage and deformation before use.
- ② Do not force the blade on skin.
- ③ Do not use the product to remove underarm hair or trim hair.
- ④ Do not use the product when make-up, cream, or soap have been applied.


*Use on bare skin.

- ① If make-up applied, clean and dry the face before use the product.
- ② If use the product at the first time, try shaving gently at an inconspicuous area.

< Basic use >

Turn the switch to ON, apply the blade to skin around 20°, and shave slowly in the direction against the flow of hair.
 *Caution: Do not raise the blade more than

20°. It may hurt skin while shaving.

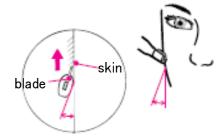

2. Make sure to turn the switch to OFF after use.

< How to shave facial hair > (Forehead, cheeks, and jaw)

Apply the blade to skin gently, and shave hair slowly in the direction against the flow of hair.



(Hairline and around nose)

Shave hair in the way properly and refer to picture on the right.



(Neckline)

Hold hair with hand and shave hair just liked the way as razor..



(Arms and legs)

Slowly shave arms from the wrist towards the elbow and legs from the ankle towards the knee in the direction against the flow of hair.



< How to shave eyebrow >

 
Shave the eyebrow in the way properly and refer to picture on the right.




< How to use the eyebrow comb >


Align the eyebrow comb with eyebrow and trimming.

The length of eyebrows is capable of being trimmed are approx. 2mm [short] and approx. 4mm [long] respectively.




 - 1. Turn the switch to OFF, attach the blade to eyebrow comb until it clicks.
 - When trimming eyebrows into 4mm, insert the blade to [long] side of the eyebrow comb.
 - When trimming eyebrows into 2mm, insert the blade to [short] side of the eyebrow comb.



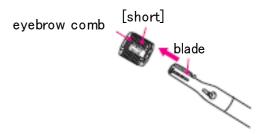

- 2. Turn the switch to ON, and align the length of eyebrows.
 - Align the eyebrow comb with eyebrow and close to skin, move slowly from the end to the beginning of eyebrow.

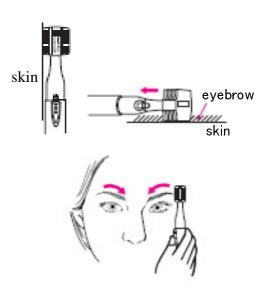

< How to exchange and clean blade >

 
Caution:

- 1. Make sure to turn the switch to OFF when cleaning blade.
 - · Use shaver cleaner only.
 - · Do not wash or splash water on the product.
 - Clean off dirt of product with cloth wrung out with water. Do not use alcohol, benzin and thinner. It would cause deformation and tarnishing.


Make sure to clean blade after use. Also make sure to use shaver cleaner which is sold separately because sticky dirt and oil may remain and cause break with cleaning brush only.

< How to remove blade >

1. Move the removable grip towards the direction of the arrow.



 2. Remove the blade towards the direction of the arrow.




< How to clean blade >

 Clean blade and hair ball on the product with cleaning brush.




 2. After cleaning, spray a bit of shaver cleaner to inside of blade and operate the product for a while. Then, clean off the blade and surface of the product.




< How to attach blade >

 1. If the removable grip is on the lock position, move it towards the direction of the arrow.




 2. Insert the hole in the front edge of blade into the projection in the edge of the product.




< How to exchange and clean blade >

3. With pressing rear blade gently against the product, move the removable grip towards the direction of the arrow. Then, attach the blade to the product.

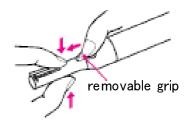

 4. Put the cap on the blade.



< Trouble shooting >

Please check the following points before contact an authorized dealer.

Symptom	Check point	Solution
The product doesn't	Check if battery places	Check the terminal and
operate.	in correct direction.	insert battery again.
Innerate	= -	Exchange old battery to new alkaline battery.
	The product may not operate if skin oil and dirt remain on the blade. Keep lubricity of blade by spraying shaver cleaner.	

Check the above points first. If the product doesn't work well, contact an authorized dealer without repair by yourself.